Thermo Recorder

TR-71W / TR-72W

User's Manual

Thank you for purchasing our product.
Carefully read this instruction manual
before using this unit.

© Copyright 2005 T&D Corporation. All rights reserved.
2005.08 16007004090

■ Notices about this User's Manual

In order to properly use this product, please carefully read this manual before using.
T&D Corporation accepts no responsibility for any malfunction of and/or trouble with this product or with your computer that is caused by the improper handling of this product and will deem such trouble or malfunction as falling outside the conditions for free repair outlined in the attached warranty.

- All rights of this User's Manual belong to T&D Corporation. It is prohibited to use, duplicate and/or arrange a part or whole of this User's Manual without the permission of T&D Corporation.
- Microsoft® and Windows® are registered trademarks of Microsoft Corporation USA and are binding in the USA and all other countries.
- Company names and product names are trademarks or registered trademarks of each company.
- Specifications, design and other contents outlined in this manual are subject to change without notice.
- On screen messages in this manual may vary slightly from the actual messages.
- Please notify the shop where you purchased this product or T&D Corporation of any mistakes, errors or unclear explanations in this manual. T&D Corporation accepts no responsibility for any damage or loss of income caused by the use of our product.
- This product has been designed for private or industrial use only. It is not for use in situations where strict safety precautions are necessary such as in connection with medical equipment, whether directly or indirectly.
- We are not responsible for any malfunction or trouble caused by the use of our product or by any problem caused by the use of measurement results of our unit. Please be fully aware of this before using our product.
- Some of our products, which come under the category of strategic goods in foreign trade law, need the permission of the Japanese government to be exported outside of Japan.
- Please read the warranty and provisions for free repair carefully.

■ FCC Compliance Statement for American Users

This device complies with Part 15 of the FCC Rules.
Operation is subject to following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: this equipment has been tested and found to comply with the limits for a Class A Digital Device,pursuant to Part 15 of the FCC Rules.These limits are designed to provede reasonable protection against harmful intterference in a residential installation.This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio / TV technician for help.

Software User's Agreement

■ Escape Clauses

- T&D Corporation does not guarantee the operation of "TR-7W Settings Utility" or "Temperature / Humidity Graph".
- T&D Corporation shall not accept any responsibility for any damage, whether direct or indirect, that results from the usage of "TR-7W Settings Utility" or "Temperature / Humidity Graph".
- Specifications of "TR-7W Settings Utility" or "Temperature / Humidity Graph" may be subject to change and service may be terminated without advance notice to the user. In such a case, T&D Corporation shall not be responsible for any damages, whether direct or indirect, from the inability to use "TR-7W Settings Utility" or "Temperature / Humidity Graph".
- T&D Corporation has no obligation to correct any defects found in "TR-7W Settings Utility" or "Temperature / Humidity Graph".

■ Copyright

- The Copyright for "TR-7W Settings Utility" or "Temperature / Humidity Graph", including the program and relevant documents, belongs solely to T&D Corporation.
- The reprinting or redistribution for commercial purposes whether in part or in whole, in magazines or as a part of any product is strictly forbidden without the expressed consent of T&D Corporation. Any inquires concerning commercial redistribution should be directed to the Sales Department of T&D Corporation.
- Please do not attempt to make any changes or modifications to "TR-7W Settings Utility" or "Temperature / Humidity Graph".

Safety Precautions and Instructions

Please carefully observe the following safety measures when using our product.

To prevent any loss or damage to our customers, other people and/or property, and to ensure the proper use of our products we ask that before using our product you carefully read, understand and follow the safety rules and precautions for our products as outlined below.

■ Explanation of Symbols

Explanation of Warning Symbols

⚠ **DANGER**	These entries are actions that absolutely under no circumstance should be taken. The taking of such an action may cause serious personal physical damage or death.
⚠ **CAUTION**	These entries are actions that if taken may lead to physical injury or damage to persons or things.

Explanation of Picture Symbols

△	Denotes an important warning or caution. Near the symbol will appear another symbol giving details. (EX : ⚠ stands for CAUTION AGAINST ELECTRIC SHOCK)
⃠	Denotes a forbidden action. Inside or near the symbol will appear another symbol giving details. (EX : ⃠ stands for DO NOT TAKE APART)
●	Denotes an action that you must take. Near the symbol will appear another symbol giving details. (EX : stands for PULL POWER PLUG OUT FROM OUTLET)

⚠ DANGER

	Do not take apart, repair or modify the main unit. It may cause fire, electrocution or damage. Ask the shop where you purchased the product or T&D Corporation to carry out any repairs.
	While installing and using this product, make sure to always follow your computer manufacturer's warnings and cautions.
	When using a Wireless LAN card, make sure to follow the directions for its use from the manufacturer.
	If water or a foreign body enters into this unit, immediately remove the batteries and stop using. Continued use may cause fire or electrocution.
	Do not use this unit in wet or humid places, such as a bathroom. Continued use may cause fire, electrocution or damage.
	Store all batteries, sensors and Thermo Recorder units out of the reach of children. It is dangerous to swallow batteries.
	If any smoke or strange smells are emitted from the unit, immediately cease using it. Continued use may cause fire, electrocution or damage.
	Do not drop the unit, or expose the unit to a strong impact. If that happens to the unit, immediately remove the batteries and stop using. Continued use may cause fire or electrocution.
	Make sure to periodically remove dust and dirt from the AC adaptor. Dust can cause moisture to accumulate and can lead to poor insulation which may result in fire.
	Do not connect or unplug the AC adaptor with wet hands. It may cause electrocution.
	This device is designed to measure and record temperature and humidity. Do not use it for any other purpose than to measure and record temperature and humidity.

⚠ CAUTION

We are not responsible for any malfunction or trouble caused by the use of our product or by any problem caused by the malfunction of our unit. Please be fully aware of this before using our product.

This product has been designed for private or industrial use only. It is not for use in situations where strict safety precautions are necessary such as in connection with medical equipment whether directly or indirectly.

This unit is not water-resistant. If the unit gets dirty, wipe it with a clean cloth and a mild detergent.

Do not expose the unit to harmful gases or chemicals. It may cause corrosion and/or other danger to the unit and to people handling the unit.

To avoid poor connections, be sure to push the sensor connector securely into the jack. When pulling out a cable from the logger, make sure to hold the connector plug to pull it out.

Condensation may occur if the unit is moved from one environment to another where the difference in temperature is great. Use the unit in an environment where the ambient temperature is from 0 to 60℃ and the humidity is from 20 to 80% RH (no condensation) or less.

Battery terminals may provide insufficient contact due to age or vibration. Please be careful not to lose data due to insufficient contact.

Battery life depends on the measurement environment, communication frequency, recording interval and battery quality.

If water or a foreign object enters the case, immediately cease using it.

To prevent damage to the unit from static electricity, remove static electricity from your body by touching metal around you (door knob, window frame) before touching the unit. Static electricity may cause not only damage to the unit, but may cause breaks in or a loss of data.

Remove batteries from any unit that is not to be used for a long period of time. Batteries left in a unit not being used for a long time may leak and cause a malfunction.

Do not place heavy or hot things on top of cables. It may cause electrocution or damage.

Do not use or store the Thermo Recorder in any of the following places. Doing so may cause electrocution, fire and/or other adverse effects to the device and/or your computer.

- Areas exposed to direct sunlight
  This will cause the inside of the device to become overheated and may cause fire, deformation, and/or other damage including malfunction.
- Areas prone to strong magnetic fields
  This may cause damage including malfunction.
- Areas exposed to water leakage
  This may cause electrocution or other damage including malfunction.
- Areas exposed to excessive vibration
  This may cause injury, malfunction, damage or loss of proper electrical contact.
- Areas near fire or exposed to excessive heat
  This may cause damage including malfunction and deformation.
- Areas prone to smoke, dust and dirt
  This may cause damage including malfunction.

Table of Contents

■ Introduction

Software User's Agreement ii
Safety Precautions and Instructions iii
What is TR-7W ? 1
Package Contents 5
TR-71W/72W Part Names and Functions
- Logger Body 7
- LCD Display 9

■ Getting Ready

Getting the TR-71W/72W Ready to Use
- Installing the Backup Battery 15
- Connecting the AC Adaptor 16
- Connecting the Sensors 17

Checking your Operating Environment
- PC Operating Environment 19
- Using a LAN 19
- Connecting Directly to a PC 19
- Using a Wireless LAN 19
- Using the Internet 19

Connecting to a Network
- Connecting to a HUB for Intracompany Communication 21
- Connecting Directly to PC for Communication 21
- Connecting to a Wireless LAN 22

Connecting to the Internet
- Using the TR-7W on the Internet 23

■ Basic Functions

Operating the TR-7W Series Web Viewer
- Opening the TR-7W Series Web Viewer 35
- TR-7W Web Viewer Functions 36

Clock and Calendar Settings 37
Recording Settings 38
Gathering Recorded Data 39

Outline of Use
- Basic Operation 11
- Operational Settings 13
- Using a Domain Name 23
- Using Mail via LAN 24
- Sending Internet Mail 24

Installation 25

Operating the TR-7W Settings Utility
- How to Open 27
- Using Help 27
- TR-7W Settings Utility Functions 28

Network Initialization Settings 29

Detailed Network Settings
- Sending the Settings 31
- Changing the Settings 32

Returning the Network Settings to the Factory Default Settings 34

■ Temp / Humidity Graph

Operating the Temp / Humidity Graph
- How to Open 41
- Using Help 41
- Temperature / Humidity Graph Display Names and Functions 42
- Data List Display Part Names and Functions 44

Making Changes to the Graph Display
- Changing Colors of Data Display Area 45
- Viewing and Hiding Channels in Graph 45
- Setting the Max. Min. Avg Calculation Range 46
- Editing Recording Conditions 47
- Reordering Channel Data 48
- Deleting Selected Channel Data 49
- Change Graph Colors 50
- Copy Display to Clipboard 51

Operating the Graph
- Returning to Original Size 52
- Zooming In and Out 52
- Moving the A/B Cursors Right and Left 52
- Moving Right and Left on the Graph 52
- Moving Up and Down on the Graph 52
- Vertical Axis Settings 52

Saving Recorded Data 53
Creating Text File 54
Opening a Saved File 55

■ Other Functions

Auto-clock Settings (SNTP Settings) 57

Monitoring Current Readings
- Viewing Current TR-7W Readings 59
- Viewing Current Readings from a Multiple Number of TR-7W Loggers 59

Warning Report Settings 63
Adjustment Function 67
Viewing Current Readings via Cell Phone 69
Graph 71
WEB Viewer Settings 72

Main Unit Settings
- Clock and Calendar Settings 73
- Buttons Setting 73
- LCD Settings 74
- Channel Name Settings 74
- Warning Mail Transmission Test 75
- Forced Cancellation of Communication 75
- Restarting the System 76

Checking and Making Changes to Computer Network Settings 77
Downloading JRE 80
Re-installing 83

■ Other

Troubleshooting
- TR-7W Settings Utility 85
- Web Viewer 87

FAQ's
- Q&A about TR-71W/72W 89
- Q&A about Web Server Functions 91
- Q&A about Viewing the Web Site 92
- Q&A about Networks 93
- Q&A about the Internet 96

Specifications 101
Options 103

What is TR-7W ?

■ Outline

Thermo Recorders TR-71W / 72W are a new type of temperature and humidity data logger equipped with a built-in function that enables connection to and use over the Internet or other network such as a LAN network. The downloading of recorded data, the monitoring of current readings and the sending of warning mails can all be done easily over the Internet or LAN network. It is possible to connect to both a wired LAN and a wireless LAN.The use of an Internet connection provides a low cost way to manage temperature and humidity data from long distances.

■ Examples of Usage

- Managing Temperature and Humidity in a distant warehouse via the Internet
- Managing Temperature and Humidity in a distant building or apartment house
- Collecting temperature and humidity data in a factory using a wireless LAN
- Managing Temperature and Humidity while on the road via cellular phone

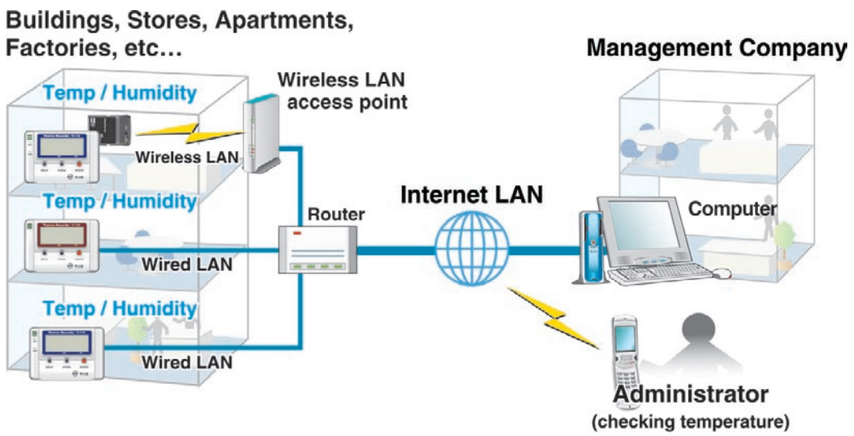

■ Basic Functions

【TR-71W / TR-72W】

● Temperature Range : 60 ～ 155℃（TR-71W）

The standard temperature sensor that comes with TR-71W has a range of 40 ～ 110℃. With the optional sensor a wider range of 60 ～ 155℃ can be measured and recorded. Please see and purchase our optional sensors to meet your specific needs.

● Humidity Measurement Range : 10 ～ 95%RH（TR-72W）

The standard sensor that comes with the TR-72W has a temperature measurement range of 0 ～ 50℃ and a humidity measurement range of 10 ～ 95% RH.

● Recording Capacity : 8000 readings x 2 channels

Each channel can record and store up to 8000 readings. At the longest recording interval of 60 minutes, recording can continue consecutively for 1 year.

● 15 Recording Intervals

There are 15 recording intervals（1 second to 60 minutes）to select from. There are 2 types of recording modes to choose from.

One Time : Upon reaching capacity of 8,000 readings, "FULL " will appear on the LCD display and recording will automatically stop.

Endless Loop : Upon reaching capacity of 8,000 readings, the oldest data is overwritten and recording continues.

● Changing the LCD Display

Using the software, you can choose to change the LCD display pattern from displaying either one of the two channels or displaying both channels alternately.

● Backup Function

Under normal conditions the AC adaptor should be used for measuring and recording data, but if there is a power shortage or the AC adaptor cable beomes unusable, the backup battery can be used for measuring and recording. Communication is not possible.

● Directly Insert LAN Card for Easy Wireless Connection

By simply inserting a CF type wireless LAN card you can use a Wireless LAN connection.

※ For a list of LAN cards that have been proven compatible, please see our Homepage for updates.

● View Current Readings via Cell Phone Internet Browser

It is possible to view current temperature and humidity readings by simply connecting to the Internet via your cell phone browser.

【TR-7W Settings Utility】

Here, settings for TR-7W can be carried out for Detailed Network Settings, Warning Report Settings, Gather Current Readings Settings and Adjustment Settings.

● Network Initialization Settings

Settings for helping to connect a TR-7W to a network.

● Detailed Network Settings

Make detailed network settings here.

● Warning Report Settings

If a set upper or lower limit has been exceeded, a warning report mail can be sent to up to 5 mail addresses. Also, if the TR-7W backup battery power has become low, a mail can be sent to inform you of the fact.

● Gather Current Readings Settings

Make settings to view current readings of up to 10 TR-7W loggers in the same browser.

● Adjustment Function

By entering the adjustment values beforehand, it is possible to view and record the adjusted measurement values.

【About the TR-7W Series Web Viewer】

With the TR-7W Series Web Viewer you can not only use a browser and manage recording start and the downloading of recorded data、but can carry out various operations as listed below.

● Recording Settings

By setting the recording interval, the recording start time and the recording mode, recording will begin at the set date and time.

● Downloading Recorded Data

It is possible to download recorded data from the TR-7W via a browser and create files.

● Monitor Current Readings

The current readings measured every 30 seconds in the TR-7W can be displayed. It is also possible to via a cell phone browser.

● Graph

Measurements taken by the TR-7W loggers can be shown in graph form which updates every 10 minutes and can show up to 1 week's worth of data.

● Main Unit Settings

Clock and Calendar Settings, Button Settings, LCD Settings, Channel Name Settings, Warning Mail Transmission Test, Forced Cancellation of Communication, Restarting the System.

【Temp / Humidity Graph】

Here, recorded data from TR-7W that has been downloaded and saved to a file can be viewed.

● View and Print Temp / Humidity Graphs

View the data downloaded from the TR-7W in a list and print.

● View 8 channels of data in 1 display

Up to 8 channels of recorded data can be viewed in the same graph at one time.

● Easy zoom in and out with mouse

By selecting a range with your mouse you can easily zoom in and out on data.

● Calculate and view the highest, lowest and average readings for a desired range

In the Graph, for each channel it is possible to designate a desired range from which the highest, lowest and average readings will be calculated and displayed.

● Graph Printing

It is possible to print in full-color the graph as you see it on display.

● Data List Display / Printing

You can view the data displayed in the graph window as a list and then choose to print.

● View in Easy to Distinguish Colors

In the data list, the highest value will appear in red, the lowest in blue, and the average in pink.

● Printing the Data List

It is possible to print the entire list as displayed or to select pages for printing.

● Creating Text File

It is possible to convert the data for a specified range（time period）to common text file format（CSV type format）, so that it can be exported to spreadsheet software such as Excel or Lotus.

Package Contents

The following items are included in the package.

■ TR-71W

Thermo Recorder TR-71W
x 1 unit



Temperature Sensor TR-0106
x 2 Sensors



LAN Cable LN-20W
x 1

AC Adaptor x 1
(AD-0605 or AD-0606)

Coin Type Lithium Battery
（CR-2032）x 1

Software CD-ROM
x 1

Introductory Guide and Warranty
x 1

■ TR-72W

Thermo Recorder TR-72W
x 1 unit



Temperature/Humidity Sensor TR-3110
x 1 Sensor



LAN Cable LN-20W
x 1

AC Adaptor x 1
(AD-0605 or AD-0606)

Coin Type Lithium Battery
（CR-2032）x 1

Software CD-ROM
x 1

Introductory Guide and Warranty
x 1

TR-71W / 72W Part Names and Functions

■ Logger Body

〔Front〕

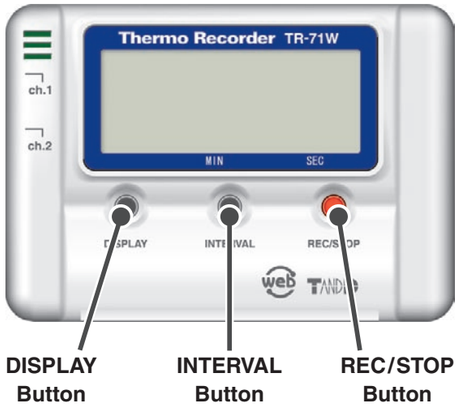

DISPLAY Button	Pressing this button will change the LCD display mode.
INTERVAL Button	By pressing this button you can check or change the currently set recording interval.
REC/STOP Button	By pressing this button you can start or stop recording.

● If you have deactivated the buttons in the Web Viewer [Button Operation Settings], the buttons will not function even if pressed.

〔Top〕

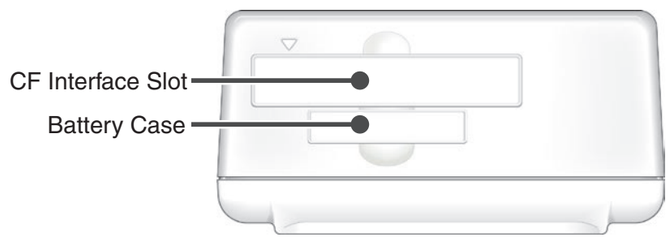

CF Interface Slot	Insert a Wireless LAN Card. ※1 **NOTE:** Do not insert anything other than a communication card.
Battery Case	Insert the backup battery.

※1 For a list of LAN cards that have been proven compatible, please see our Homepage for updates.

〔LEFT SIDE〕

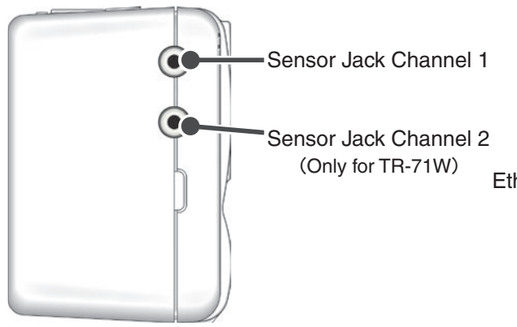

〔RIGHT SIDE〕

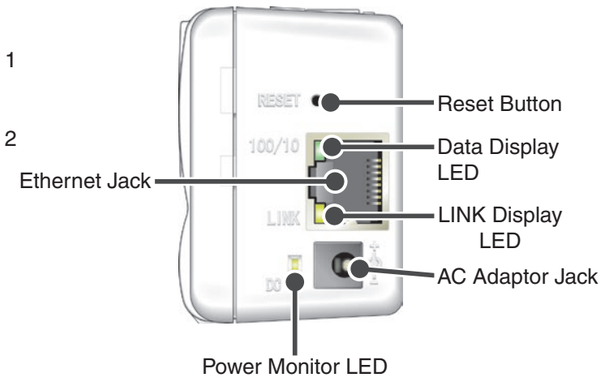

Ethernet Jack	10Base-T / 100Base-TX Ethernet Jack Connect the LAN Cable
AC Adaptor Jack	Connect the supplied AC adaptor here.
Reset Button	Press to return to the factory default settings.
Data Display LED	When data is being input or output the lamp will blink green.
LINK display LED	The communication speed will appear in green. Lamp on: 100Mbps, Lamp blinking: 10 Mbps
Power Monitor LED	While the power is ON, the lamp will appear green.

■ LCD Display

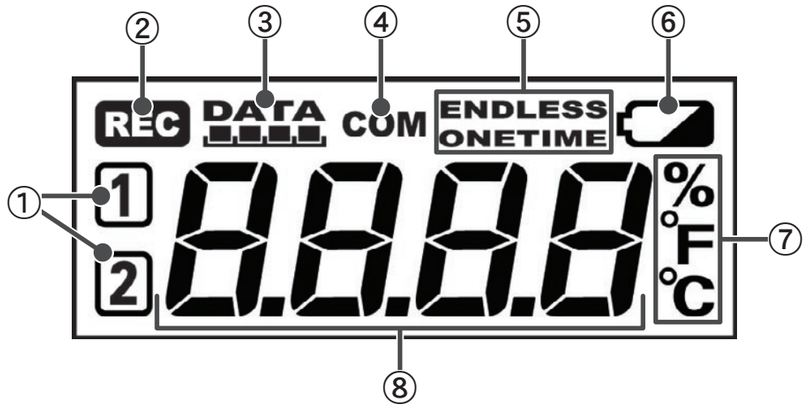

① Channel Mark

The channel number of the measurement being displayed will appear.

② Rec Mark

The recording condition will appear.
ON : Recording in progress. BLINKING :Waiting for programmed start.

③ Recording Capacity

After every 2000 readings the scale will be marked from left to right.

④ COM Mark

This will appear when data is being processed.

⑤ Recording Mode

One Time : Upon reaching capacity of 8,000 readings, “FULL” will appear on the LCD display and recording will automatically stop.
Endless Loop : Upon reaching capacity of 8,000 readings, the oldest data is overwritten and recording continues.

⑥ Battery Life Warning Display

When the battery power becomes low, a mark will appear on the LCD of the main unit.
If the battery is not changed and power becomes even lower, the display will go off and all normal operations will stop. Please change the battery as soon as the Battery Warning Mark appears.

⑦ Unit of Measurement

The channel number of the measurement being displayed will appear.

⑧ Measurements and Messages Area

Current measurements or operational messages will appear here.

〔Other Displays〕

● Loc

If you have deactivated the buttons in the Web Viewer [Button Operation Settings], and you press a button “Loc” will appear in the display.

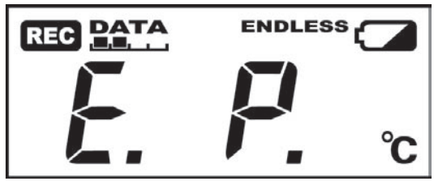

● E. P.

When external power has been disconnected, the display will alternate CH1, CH2, E.P.
If the display has been set for a fixed channel, that fixed CH and E.P. will be alternately displayed.

● FULL

When recording under the One Time mode and upon reaching capacity of 8,000 readings, “FULL” will appear on the LCD display and recording will automatically stop.

Outline of Use

■ Basic Operation

【Getting Ready】

1. Getting the TR-7W Ready to Use

Get the TR-7W logger ready to measure temperature and humidity by inserting the backup battery, connecting the AC adaptor and the sensor(s).

2. Checking your Operating Environment

You also need to check your computer and network setup and be sure to prepare any necessary devices like routers to enable connection to your access point.

3. Connecting to a Network

Connect the Network Cable.
See examples of connections on p.21-22 for how to connect the TR-7W to your router or computer and upon completion turn the power ON.

※ Even if you are planning to use a wireless LAN, it is necessary to make the initial settings via a wired connection.

4. Installing the TR-7W Settings Utility

To enable set up, install the supplied software "TR-7W Settings Utility" into your computer. With the "TR-7W Settings Utility" you will be able to make all basic network settings.
When installing the "TR-7W Settings Utility", we suggest that you also install the "Temperature /Humidity Graph" into the same folder.

【Initialization Settings】

1. Network Initialization Settings.... From the TR-7W Settings Utility

To connect to a network it is necessary to enter an IP address and subnet mask that are appropriate for your network. Under Network Settings make the appropriate settings for your "IP address" and "Subnet mask". More detailed settings can be made in "Detailed Network Settings" Moreover, from the TR-7W Web Viewer other settings can be made for the Main Unit and for the TR-7W Web Viewer Display.

2. TR-7W Main Unit Clock and Calendar Settings

.... From the TR-7W Series Web Viewer

From the TR-7W Web Viewer, first set the data logger's clock and calendar settings to your local time. These settings will be valid until the logger's web server is restarted or the power is turned OFF.

【Basic Operations】

1. Recording Settings.... From the TR-7W Series Web Viewer

By setting the recording interval, the recording start time and the recording mode, recording will begin at the set date and time.
It is also possible to set the recording interval on the logger by using the [INTERVAL] button and to start and stop recording by using the [REC/STOP] button.

2. Gather Recorded Data.... From the TR-7W Series Web Viewer

It is possible to download recorded data from a TR-7W unit and view the data with "Temp / Humidity Graph".
It is possible to download data while continuing to record.

3. Other Functions

- **Monitoring Current Readings**.... From the TR-7W Series Web Viewer
  In the TR-7W Web Viewer, it is also possible to view current readings via a browser. By registering multiple loggers with the "TR-7W Settings Utility", it is possible to view current readings of up to 10 (TR-7W) loggers in the same browser. The current reading will be refreshed every 30 seconds.
- **Warning Monitoring**.... From the TR-7W Settings Utility
  You can make settings to have warning mail sent when the data being recorded exceeds a set range.
- **Graph**.... From the TR-7W Series Web Viewer
  Data recorded by the TR-7W loggers can be shown in graph form which updates every 10 minutes and can show up to 1 week's worth of data.
- **Adjustment Function**.... From the TR-7W Settings Utility
  By adjustment measurement values, it is possible to view and record the adjusted measurement values.

【Temp / Humidity Graph】

Graph Display.... From the Temp / Humidity Graph

Up to 8 channels (4 TR-7W units) of recorded data that has been downloaded and saved to a file can be viewed in 1 graph.
You can view the data displayed in the graph window as a list and then choose to print.
It is also possible to convert the data to common text file format (CSV type format).

※ We advise that you save displayed and edited data as is necessary.

■ Operational Settings

【TR-7W Settings Utility】

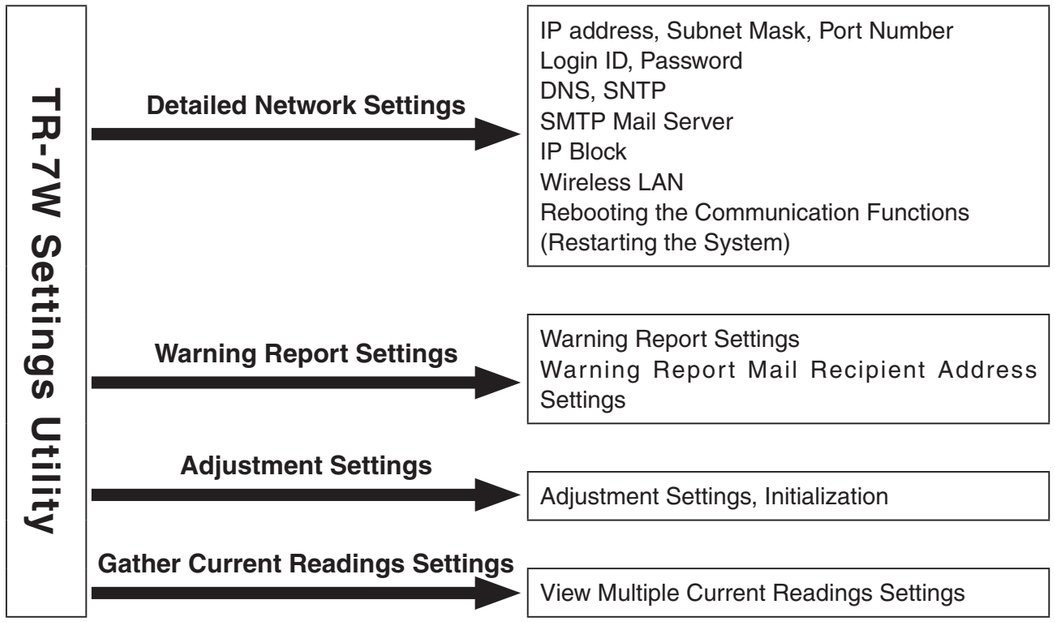

【TR-7W Series Web Viewer】

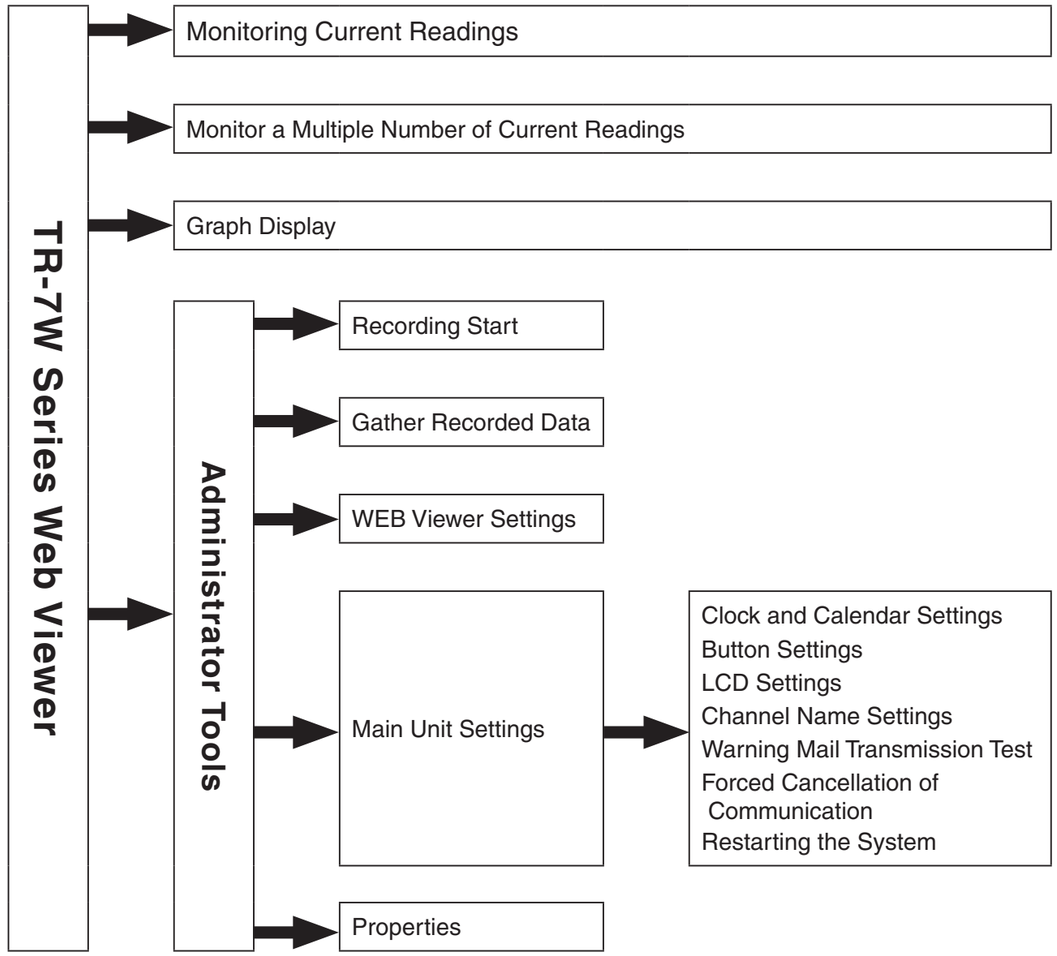

Getting the TR-71W / 72W Ready to Use

■ Installing the Backup Battery

1. Pull out the battery case.

2. Insert the battery into the case making sure not to mistake + / −.

- Insert a new battery into the case.

3. Replace the battery case.

- There are no POWER switches on the TR-71W / 72W units. Once the battery is reinserted, power will go on.

【Battery Functions】

Under normal conditions the AC adaptor should be used for measuring and recording data, but if there is a power shortage or the AC adaptor cable becomes unusable, the backup battery can be used for measuring and recording.

NOTE :

- Communication cannot occur with only the backup battery.
- If no battery has been installed and the AC adaptor power cannot be used, all data will be lost. So, please be very careful.

【Replacing the Battery】

When the battery power becomes low, a mark will appear on the LCD of the main unit. If the battery is not changed and all power is lost, the saved data will also be lost. Please change the battery as soon as the Battery Warning Mark appears.

■ Connecting the AC Adaptor

- Please make sure to use the proper AC adaptor for your local voltage. The AD-0605 AC adaptor has an input range of 100 to 120V, the AD-0606 AC adaptor has a range of 100 to 240V.
- To ensure a proper connection make sure that the plug is completely inserted.

NOTE :

- Do not use an AC adaptor other than the one that is supplied with the product. Doing so may cause fire or other trouble.
- Insert the AC adaptor plug into the socket. Inserting the plug into a socket with different voltage may cause fire or other trouble.
- Do not insert or pull out the AC adaptor plug with wet hands or if there are water drops on the plug; it may cause electrocution.

■ Connecting the Sensors

〔TR-71W〕

● To ensure a proper connection make sure that the plug is completely inserted.

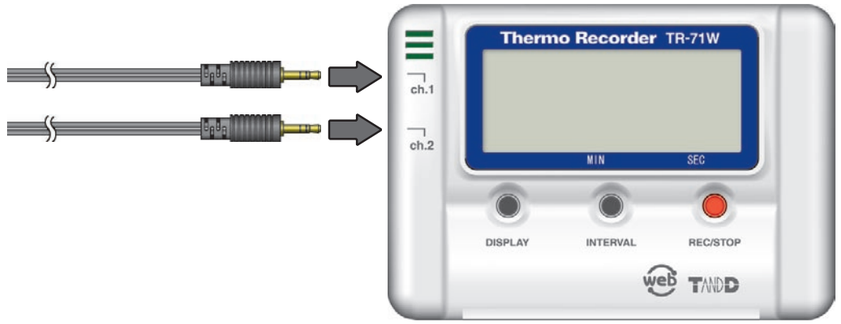

〔TR-72W〕

※ When using the temperature / humidity sensor in environments where the temperature is 0 to 15 and humidity under 30 RH, there may occur changes in measurement readings. This is not a malfunction.

● To ensure a proper connection make sure that the plug is completely inserted.

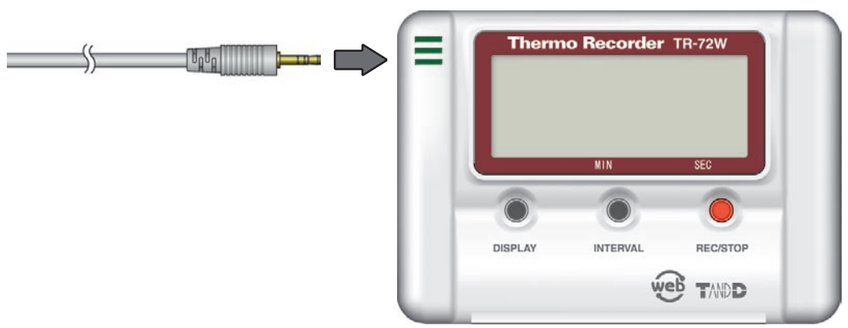

【Handling the Temperature / Humidity Sensor】

● The temperature / humidity sensor should probably be changed after a period of about one year. After removing the sensor from its package, please change the temperature/humidity sensor after one year's usage. During use the temperature/humidity sensor will accumulate impurities (dirt) on the surface of the sensor causing the sensor's accuracy and sensitivity to decrease. If the sensor is being used in a bad environment (smoky or dusty places) it may be necessary to change the sensor sooner.

● When the temperature/humidity sensor is not being used, please place it in the attached vinyl bag with the drying agent included and store it in a cool dark place with a temperature of between 5 to 25℃ and a humidity of below 30％ RH.

● Attached to the temperature/humidity sensor are two stickers: a wetness detection sticker and a temperature detection sticker. If either of the stickers shows abnormality, you should change the old sensor to a new one immediately.

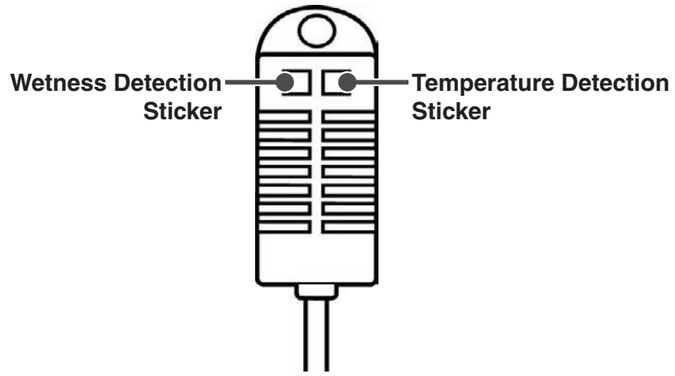

■ Wetness Detection Sticker

Informs you that the sensor has been wet.

Under normal conditions, black dots will appear on a white background.

Normal

Under abnormal conditions, the background will turn to red.

Abnormal

■ Temperature Detection Sticker

Informs you that the sensor measured a temperature measurement over 60℃ .

60

Under normal conditions, the number "60" will lightly appear on a pinkish white background.

Normal

60

Under abnormal conditions, the number "60" will clearly appear on a red background.

Abnormal

Checking your Operating Environment

To properly use the logger, the following operational environment is necessary.

■ PC Operating Environment

OS	Microsoft Windows 2000 Microsoft Windows XP ※ To install the Settings Utility, it may be necessary to have Administrator Rights for the computer into which it will be installed.
PC ／ CPU	A Stable Windows Operating Environment LAN・TCP/IP Communication Possible
Memory Capacity	Enough memory to stably operate Windows
Disc Space	More than 10MB of free space（More free space is necessary for data）
Monitor	VGA（SVGA（higher than 800×600 recommended）・more than 256 colors
LAN	100BASE-TX or 10BASE-T Twisted pair cable confirming to Category 5（STP / UTP）
Web Browser	Internet Explorer 6.0 or higher

■ Using a LAN

Connect the provided LAN cable to the HUB that is connected to your computer.

■ Connecting Directly to a PC

Connect the TR-71W / 72W to your computer with a LAN cross cable.

※ LAN cross cables are not included with the product. Please purchase separately.

■ Using a Wireless LAN

Please use a Wireless LAN card and a Wireless LAN access point（Combined Wireless LAN and Hub OK）.

※ For a list of LAN cards that have been proven compatible, please see our Homepage for updates.
＜ http://www.tandd.com ＞

■ Using the Internet

In order to connect to the Internet, you must first make arrangements with a provider for a line.
In order to send mail via the Internet you must be using a provider that does not use SMTP authentication or POP before SMTP.
It may also be necessary to get an IP address or domain and make domain name server and other settings.
For more details about various settings, it is best, if present, to contact your network administrator. To get more details about your Internet connection and setup, please contact your provider.

Connecting to a Network

Following are some examples of ways to connect a TR-7W logger to a network. Please select the connection method that suits your network environment.

■ Connecting to a HUB for Intracompany Communication

● To ensure a proper connection make sure that the plug is completely inserted.

Connection Examples

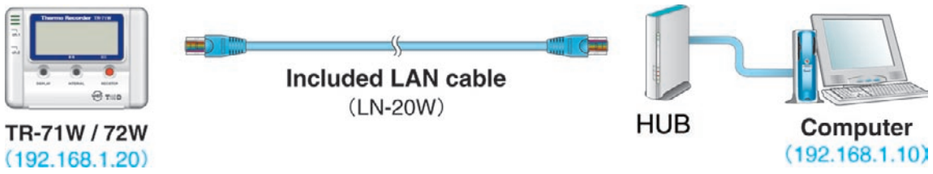

■ Connecting Directly to PC for Communication

For direct connection, please purchase and use a LAN cross cable, not the provided straight LAN cable.

● To ensure a proper connection make sure that the plug is completely inserted.

Connection Examples

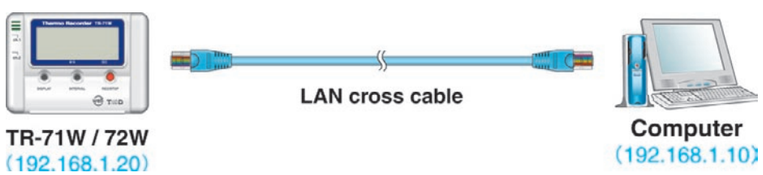

■ Connecting to a Wireless LAN

By inserting a Wireless LAN card into the TR-7W, it is possible to carry out communication in places where LAN wiring is difficult or troublesome.

● To ensure a proper connection make sure that the plug is completely inserted.

NOTE:

● Please do not use any CF type Wireless LAN cards that have not been proven to be compatible and are not on our LAN card list .

● For a list of LAN cards that have been proven compatible, please see our Homepage for updates.

Connection Examples

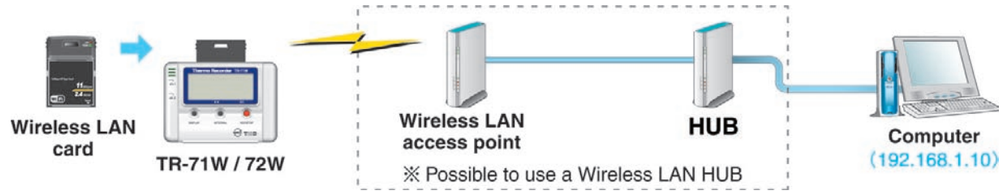

Connecting to the Internet

In order to connect the TR-7W to the Internet you must first set up an Internet connection environment by making arrangements with a provider for a line and get a global IP address and domain. Also, if necessary, make all domain name server and / or router settings.
For more details about various settings, it is best, if present, to contact your network administrator. To get more details about a global IP address and domain, please contact your provider.
The following are examples of connection methods. Please select the connection method that suits your network environment.

Connection Examples

■ Using the TR-7W on the Internet

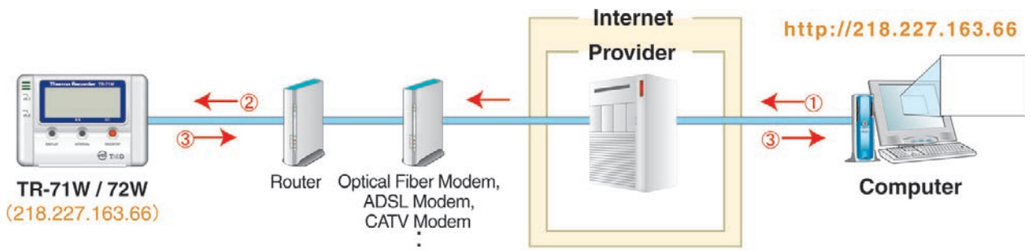

① In your computer browser, open the global address that has been assigned to the TR-7W.
(ex: 218.227.168.66)
② Call up via the provider or router.
③ Data is returned from the TR-7W.

■ Using a Domain Name（ex : tr-7w.net）

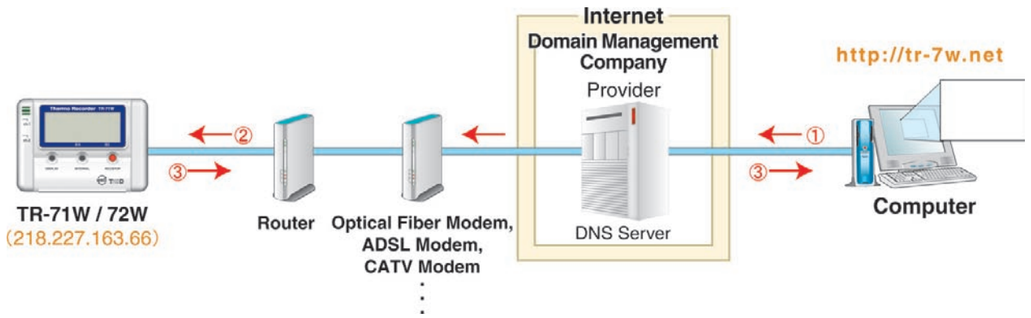

① From your computer browser, open the domain name.（ex : tr-7w.net）
② The domain name will be converted to a global IP address by the DNS server and the TR-7W will be called.
③ Data is returned from the TR-7W.

■ Using Mail via LAN

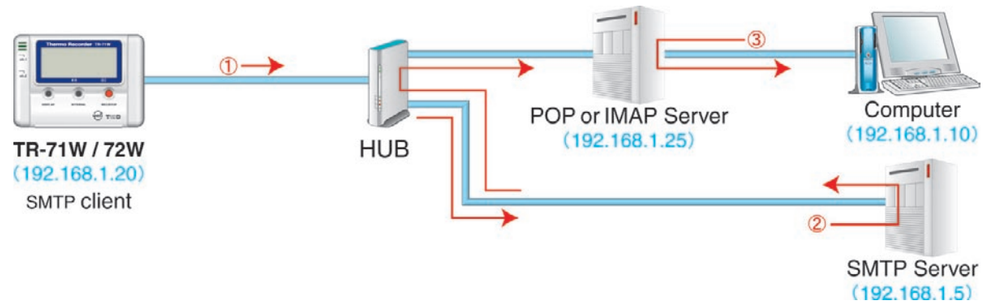

① The TR-7W accesses the SMTP server and sends mail.
② The SMTP server delivers the received mail.
③ The computer receives mail from the POP mail server.

NOTE :
In order to receive mail, it is necessary to have a SMTP mail server and a POP or IMAP mail server located on the LAN.

■ Sending Internet Mail

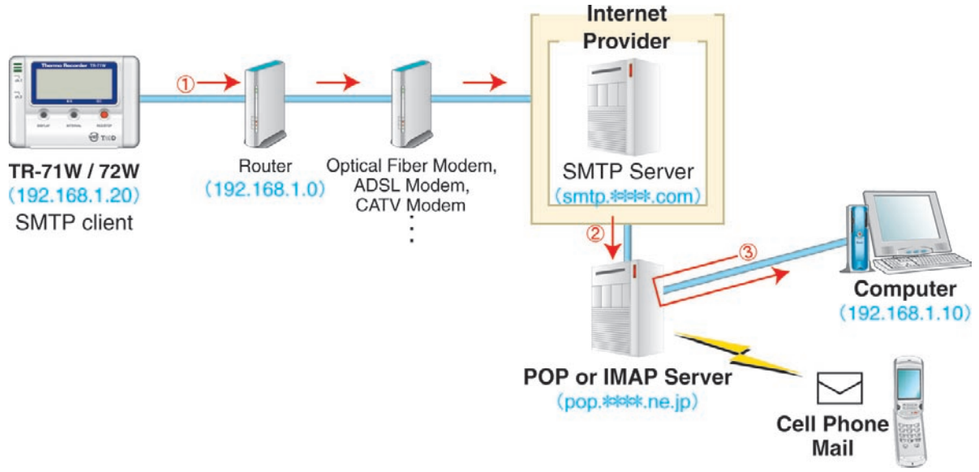

① The TR-7W accesses the SMTP server and sends mail.
② The SMTP server delivers the received mail.
③ The computer receives mail from the POP mail server.

NOTE :
Please make all necessary router (LAN) settings.

Installation

Install the provided software.

● **Is Windows® operating properly?**

If Windows is not operating properly, "TR-7W Settings Utility" and "Temp /Humidity Graph" may not be installed correctly or it may not operate properly.

● **Please quit all other applications.**

If other programs are open, please close and quit all of them, making sure to quit all Quick Start programs such as a virus checker.

※ To install the [Settings Utility], it may be necessary to have Administrator Rights for the computer into which it will be installed.

1. Open Windows®.

2. Place the accompanying CD-ROM into your CD-ROM drive. In a few seconds, the "Install Program" window will appear.

※ If that window does not automatically open, please open it by double clicking the CD-ROM icon in "My Computer" on your desktop.
Or, if after double clicking the CR-ROM drive, the file appears in the CD-ROM folder, double click on the "start.exe" icon.

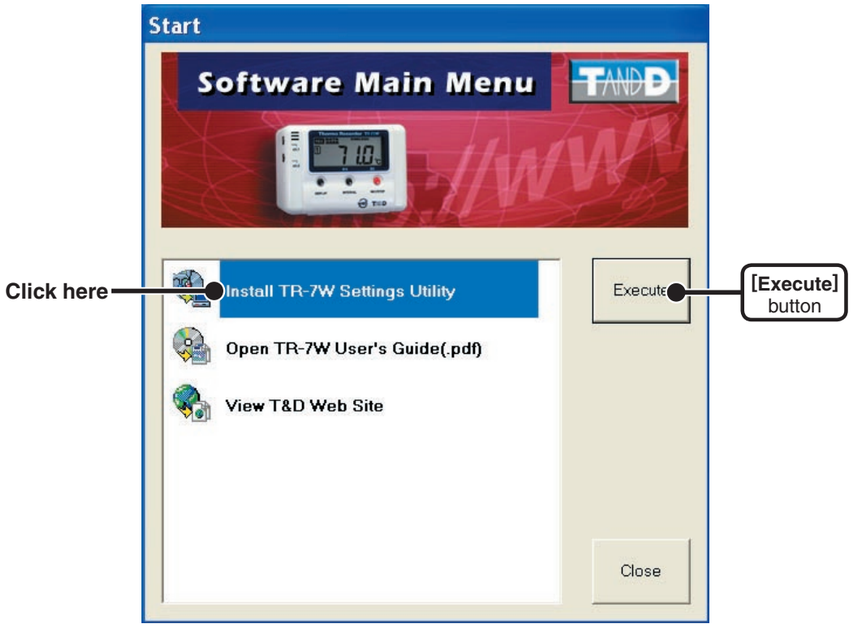

3. Select "Install TR-7W Settings Utility" and click the [Execute] button to start the installation.

4. Continue the installation by following the directions as they appear. During installation, you can choose which modules you wish to install. Please select the modules you wish and follow the installation directions.

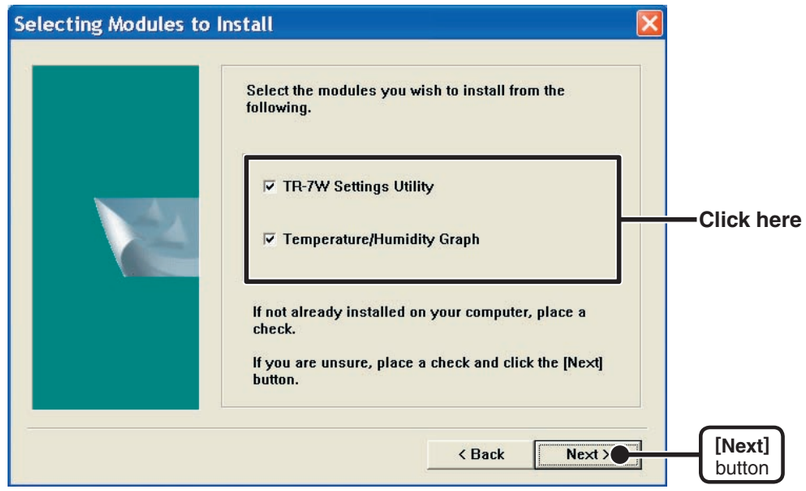
Selecting Modules to Install
Select the modules you wish to install from the following.
TR-7W Settings Utility
Temperature/Humidity Graph
Click here
If not already installed on your computer, place a check.
If you are unsure, place a check and click the [Next] button.
< Back
Next >
[Next] button

5. After installation has been completed, "TR-7W for Windows" will be registered in the Window's "Start" Menu.

Operating the TR-7W Settings Utility

■ How to Open

From the list of programs in the Window's Start Menu, click on "TR-7W for Windows" – "TR-7W Settings Utility.

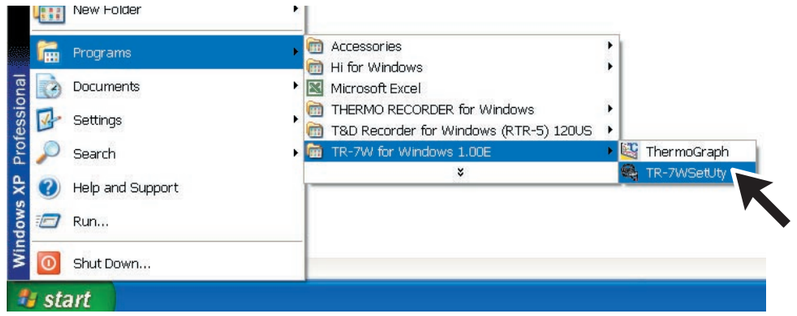

■ Using Help

For details about how to use the software, please see the explanations in the Software Help Menu.

● By clicking on "Help" in the Menu Bar and then "How to Use TR7WwebUty and TR7Web" you can click on one of the tabs "Contents" or "Index" to search for the topic or term you are unsure about or have questions about.

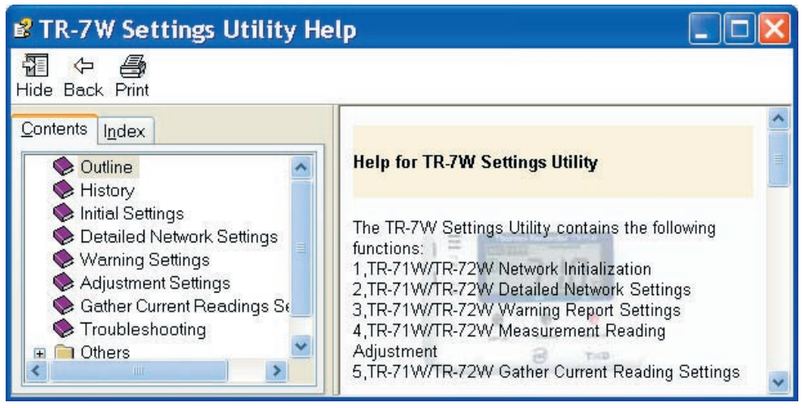

Contents

By clicking on one of the topics listed, you can find detailed information for that subject.

Index

By selecting a keyword in the Index list, and clicking the [View] button at the bottom, a detailed explanation will appear.

● By clicking the [Help] button in a dialog box, an explanation for that dialog box will appear.

■ TR-7W Settings Utility Functions

To open, in the Windows Start Menu, under Programs, click "TR-7W Settings Utility".
The TR-7W Settings Utility contains operational settings for such functions as Initial Network Settings, Warning Report Settings, Gather Current Reading Settings and others operational settings as explained below.

NOTE:

If you open "TR-7W Settings Utility" on multiple computers in the same network, it may not work properly. Please open it from only one computer at a time in the same network (same broadcast domain).

[Menu]

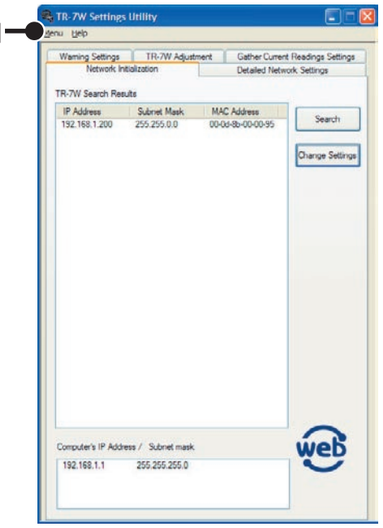

● "Network Initialization" Tab
Here you can make settings for connecting a TR-71W/72W to a network.

● "Detailed Network Settings" Tab
Make detailed Network settings here.

● "Warning Settings" Tab
Make settings to send mail to report when measured readings have exceeded limit settings.
Also, if the TR7W backup battery power has become low, a mail can be sent to inform you of the fact.

● "TR-7W Adjustment" Tab
By adjustment measurement values beforehand, it is possible to view and record the adjusted measurement values.

● "Gather Current Reading Settings" Tab
Make settings to view current readings of multiple TR-71W/72W's in one browser.

● "Menu"–"Login History"
If you wish to disable the History Function, select "Login History" → "OFF".

● "Menu"–"Clear Login History"
Use this to erase the entire login history.

● "Menu"–"Communication Time Settings"
It is possible to change the communication time for all types of communication to match your network environment.

Network Initialization Settings

To connect a TR-7W to a network, it is necessary to make the correct IP Address and Subnet Mask settings appropriate to your network environment.

NOTE :

To make IP address changes, connect one TR-7W unit at a time and carry out the changes. Please note that upon purchase, all TR-7W units are set with the same IP address. Do not connect more than one unit with the same address to the network at the same time.

1. It is necessary to connect to the same network as to which the computer you have opened this application (TR-7W Settings Utility) is connected to.

2. In "TR-7W Settings Utility", click on the "Network Initialization" Tab and then click on the [Search] button. After clicking, the search results will be shown in about 5 seconds.

● The factory default settings for TR-7W are as follows: IP Address : "192.168.1.200", Subnet Mask : "255.255.0.0".
The MAC address is written on a sticker on the back of the TR-7W logger.

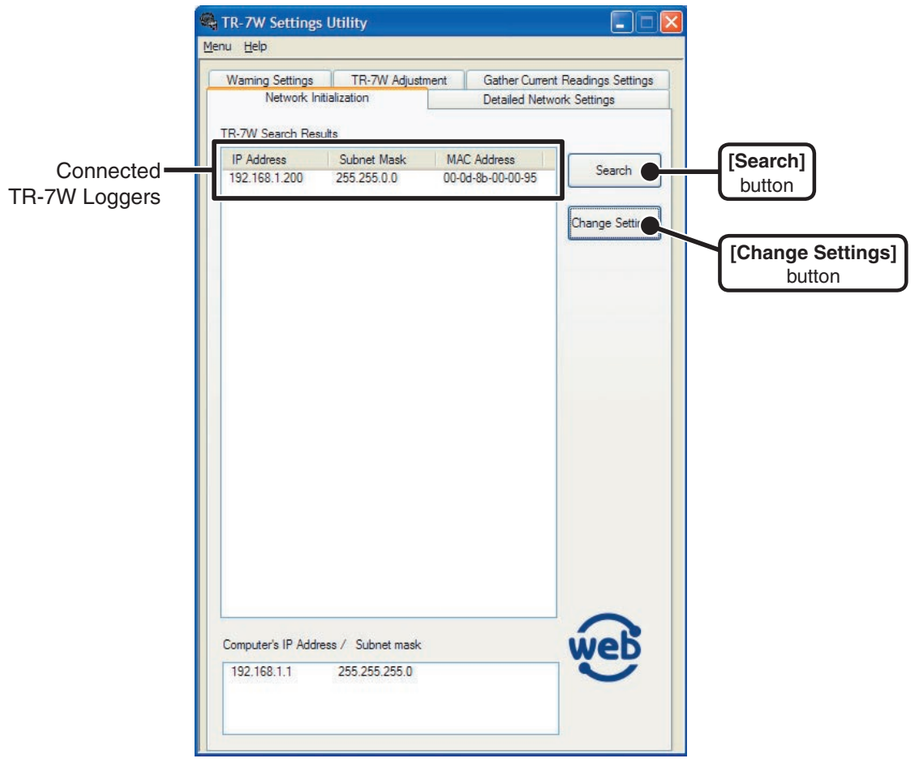

3. From the displayed list, select the TR7-W to which you wish to make settings by either double clicking on that address or select and click on the [Change Settings] button.

● The "Network Settings" window will then appear.

4. Enter an IP Address and Subnet Mask.

● Enter an IP address and subnet mask that is appropriate for your network.

NOTE :

Do not use the same IP address for two different units. It may cause abnormalities to the entire network system.

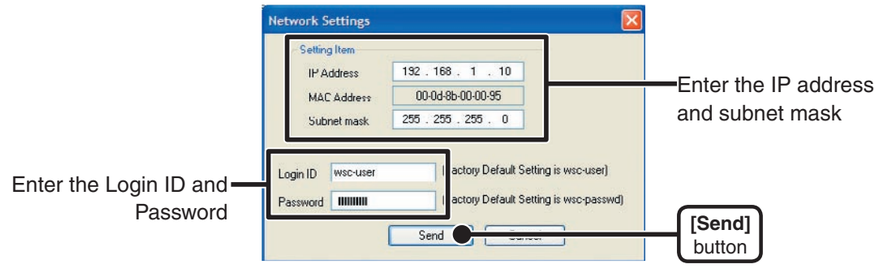

5. After entering the above, next, enter the login ID and password.

● The TR-7W factory default login ID is "wsc-user" and the password is "wsc-passwd". Make any necessary changes to the login ID and password at "Detailed Network Settings". See page 31 for details.

6. After checking for entry errors, click the [Send] button. After transmission has been completed a message will appear. Click the [OK] button to finish.

※ After settings are completed the TR-7W will automatically restart. During the restarting process, a search cannot be performed, even if you click the [Search] button. Please try again after 30 seconds.

【If no units are detected】

● The TR-7W and your computer are not properly connected.
● Check the hub power switch and the network cable type.
● In some network environments, it may be necessary to make changes to the IP address and subnet mask at the computer side in order to carry out a search. For details, see page 75 [Checking and Making Changes to Computer Network Settings].
● Do not use a LAN card which has not been formatted.

Detailed Network Settings

Make more detailed network settings for the TR-7W here.

※ Before making any settings here, please set the TR-7W with the proper IP address.

■ Sending the Settings

1. Click the [Detailed Network Settings] Tab.

2. In the [Get Settings] Area, enter the information for the TR-7W you wish to make settings for and click the [Get Settings] button. The current settings will appear.

- A list that shows all of the IP addresses and domain names with which successful communication has occurred until now will appear in the [Settings History].
  If you select an IP address or domain name here, the Login ID, Password and Port Number will be entered automatically.

※ Note that if you have turned [OFF] the [Login History] in the [Menu] or if you have deleted the Login history by having clicked [Clear Login History] the Settings History will not appear.

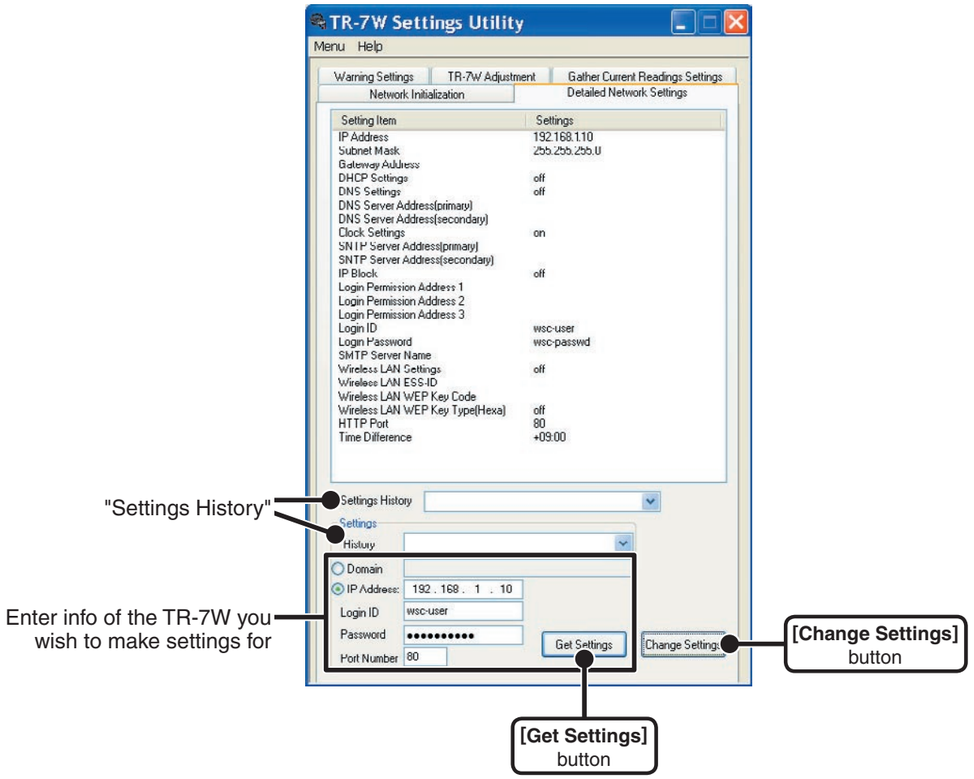

■ Changing the Settings

1. Click the [Change Settings] button, and make any necessary changes to the [Detailed Network Settings].

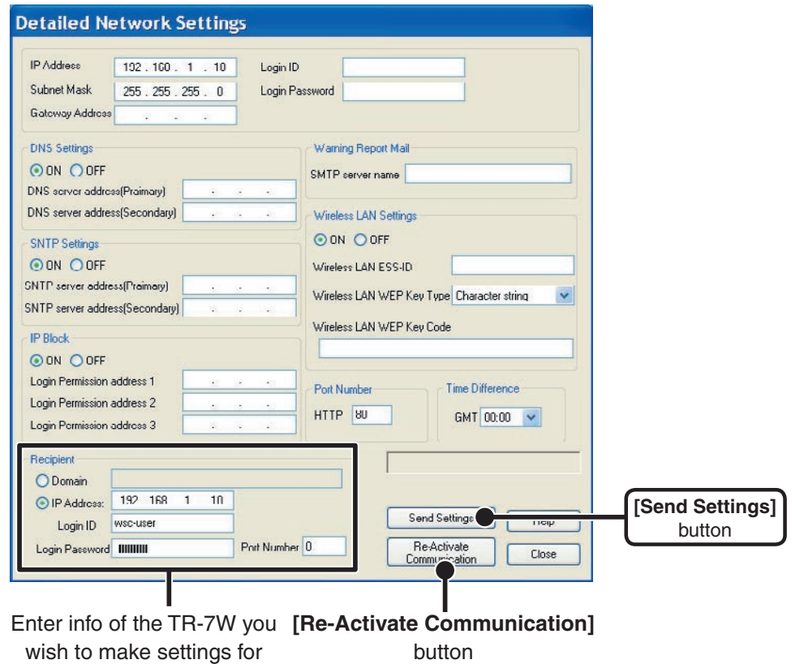

2. After making the changes, enter the info for the recipient of the settings and click the [Send Settings] button.

3. A message will appear asking you if it is OK to restart the system. Click the [Yes] button to restart.

※ The new settings will not become activated without reactivating the TR-7W communication functions.

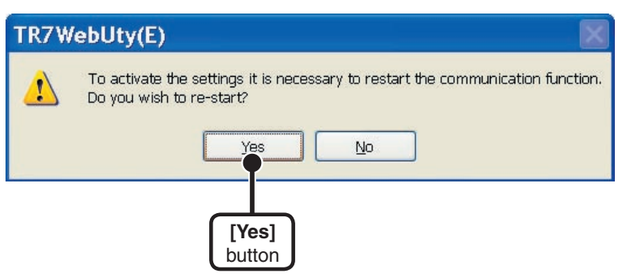

4. After the reactivation has been completed, the settings will have been successfully made.

● [Re-Activate Communication] Button

If the browser does not open, if there is an error in the clock settings when getting current readings from a number of loggers, or if any errors occur during communication, click the [Re-activate Communication] button.
Note that by restarting, the graph in the TR-7W Web Viewer will also be reset.

NOTE:
By clicking the [Re-Activate Communication] button or the [Send Settings] button over and over, communication may become impossible. Please try again after 20 seconds.

Returning the Network Settings to the Factory Default Settings

If you have forgotten the IP address or the password you can easily return the logger to the default factory settings.

※ With the backup battery, the recorded data in the TR-7W will be saved as is.
※ The "warning settings" and "get current reading settings" will also be saved as they are.

1. Pull out the AC adaptor plug from the TR-7W logger.

2. Press in the [RESET] button on the TR-7W logger with a sharp object and while pressing in, reconnect the AC adaptor.

3. When the [Power Monitor LED] on the TR-7W logger starts blinking, release the [RESET] button and the unit will have been returned to the factory default settings.

Operating the TR-7W Series Web Viewer

■ Opening the TR-7W Series Web Viewer

1. Open Internet Explorer.

※ If you wish to use the Internet, make sure that the power for the router and computer are on so as to enable connection to the Internet.
※ Set the browser so as to enable Cookies.
※ Make necessary settings to enable both Java applets and Java script.

2. In the address area, enter the address of the TR-7W logger you wish to view.

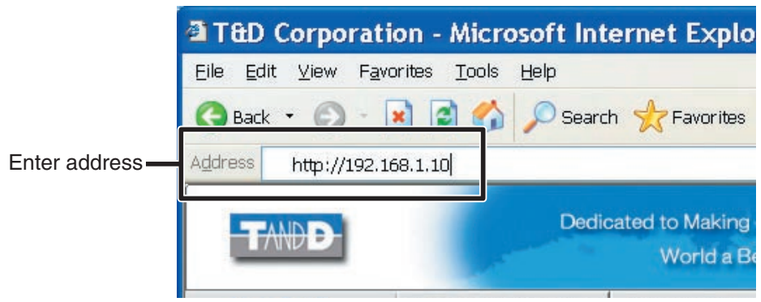

3. By pressing the [Enter] key, the TR-7W Series Web Viewer will appear.

※ If the system has been restarted with the SNTP (for automatic clock settings) disabled, the [Clock and Calendar Settings] window will appear only the first time the Web Viewer is opened.

【If the Viewer does not appear】

Check to make sure that the IP address and subnet mask are set correctly and if necessary redo the [Detailed Network Settings].

■ TR-7W Series Web Viewer Functions

Upon opening the TR-7W Series Web Viewer, communication will begin with the TR-7W logger and the current readings monitor will appear.
With the TR-7W Series Web Viewer you can not only use the browser and manage recording settings and the downloading of recorded data, but can also carry out various operations as listed below.

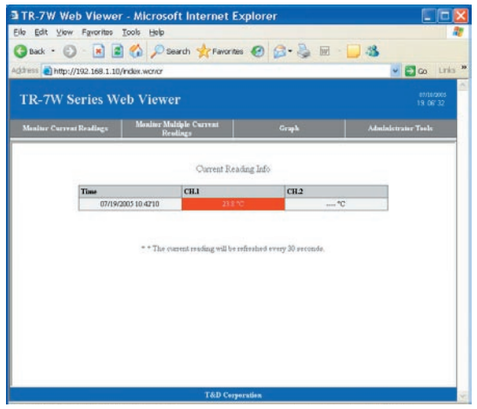

《Monitor Current Reading Window》

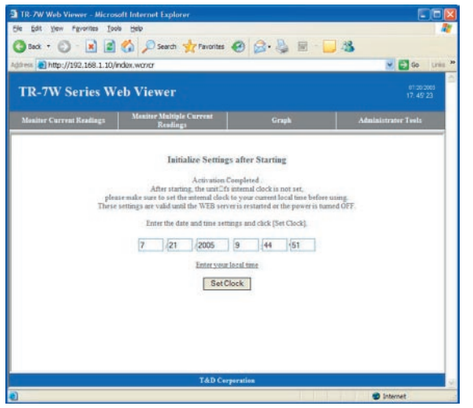

《Initial Clock and Calendar Settings Window》

● Monitor Current Readings

The current readings measured every 30 seconds in the TR-7W can be displayed and viewed.

● Monitor Multiple Current Readings

By registering a multiple number of TR-7W loggers in [TR-7W Settings Utility], it is possible to simultaneously view a number of current readings from multiple loggers.

● Graph

Measurements taken by the TR-71W loggers can be shown in graph form which updates every 10 minutes and can show up to 1 week's worth of data.

● Administrator Tools

※ To open Administrator Tools, the Login ID and Password are needed.

Recording Settings : Make setting changes to the recording conditions.
Download Recorded Data : Download recorded data to a computer and create files.
WEB Viewer Settings : Make changes to names of the Main Title, Window Title and Footer.
Main Unit Settings : Make various settings concerning the TR-71W loggers.
Properties : Displays all of the TR-7W settings.

Clock and Calendar Settings

If the TR-71W's date and time are set incorrectly, the recording start time, the download data time, and the monitor current readings time will all be wrong. Please make sure to set correctly before beginning to use.

NOTE :
If you make clock settings manually, the clock will lose its settings upon removal of the AC adaptor or after restarting the system. Hence, it is necessary to reset the clock after having restarted the system or having lost AC power. By using the Auto-clock Settings (SNTP Settings) it is possible to have the clock automatically reset to the current time upon restarting the system. For more details about making settings for the Auto-clock settings see p. 57.

1. Open the Web Viewer for the TR-7W you wish to make settings for.

● See page 35 for more details about the display.

2. If the system has been restarted with the SNTP (for automatic clock settings) disabled, the [Clock and Calendar Settings] window will appear only the first time the Web Viewer is opened. Enter the Current Date and Time.

● By clicking [Enter your Local Time], your current computer settings will automatically be entered.
If using [Enter your Local Time], please make sure that your computer clock settings are correct.

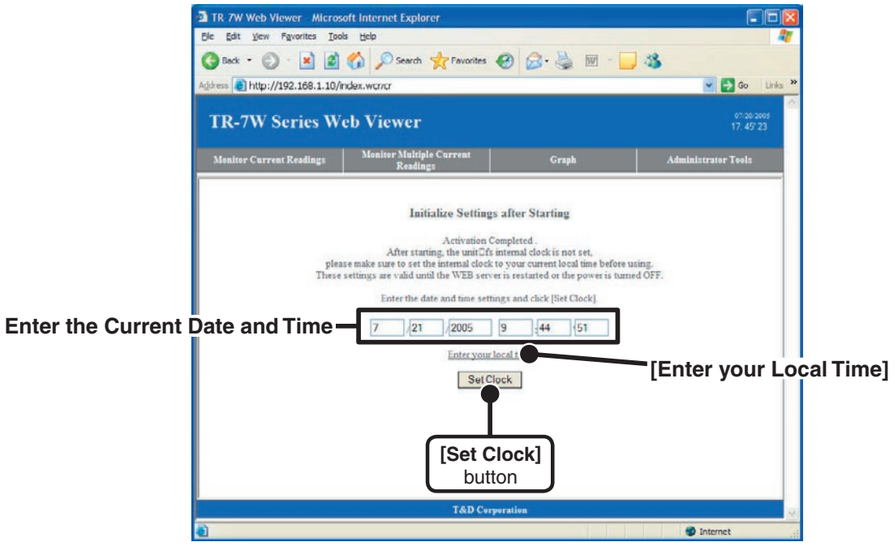
TR-7W Web Viewer - Microsoft Internet Explorer
TR-7W Series Web Viewer
Monitor Current Readings
Monitor Multiple Current Readings
Graph
Administrator Tools
Initialize Settings after Starting
Activation Completed.
After starting, the unit's internal clock is not set,
please make sure to set the internal clock to your current local time before using.
These settings are valid until the WEB server is restarted or the power is turned OFF.
Enter the date and time settings and click [Set Clock].
7 21 2005 9 44 51
Enter your local t
Set Clock
T&D Corporation
Enter the Current Date and Time
[Enter your Local Time]
[Set Clock] button

3. By clicking the [Set Clock] button, the date and time that you have entered will be sent to the logger. Once the setting has been completed the Monitor Current Readings Window will appear.

Recording Settings

1. Open the Web Viewer for the TR-7W you wish to make settings for.

● See page 35 for more details about the display.

2. Under "Administrator Tools" select "Recording Settings".

※ To open Administrator Tools, the proper Login ID and Password are needed.

3. Setting the Recording Conditions.

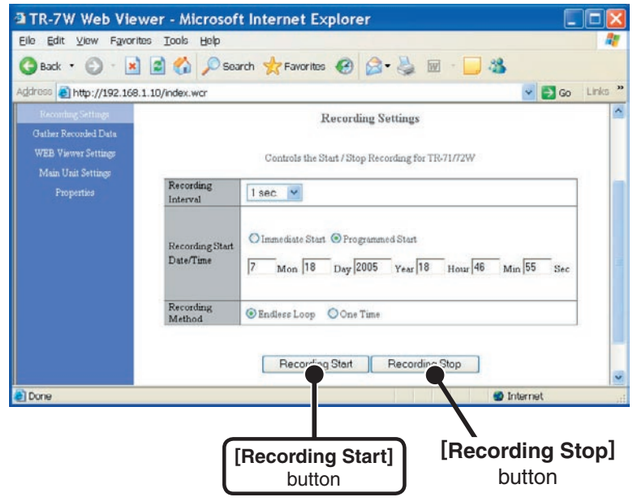

● **Recording Interval** 〈Select from : 1,2,5,10,15,20,30 seconds, or 1,2,5,10,15,20,30,60 minutes〉
Click the ▼ button to select an interval from the list.

● **Recording Start Date / Time** 〈Select from : Immediate Start / Programmed Start〉
Immediate Start : Recording will start after the [Recording Start] has been clicked.
Programmed Start : Recording will begin on the set date and time.

● **Recording Method** 〈Select from : Endless Loop / One Time〉
Endless Loop : Upon reaching capacity of 8,000 readings, the oldest data is overwritten and recording continues.
One Time : Upon reaching capacity of 8,000 readings, "FULL"will appear on the LCD display and recording will automatically stop.

4. Click the [Recording Start] button to send the recording condition settings to the logger and complete the set-up.

● **[Recording Stop] button**
Press to stop recording during a recording session.

Gathering Recorded Data

1. Open the Web Viewer for the TR-7W logger from which you wish to download data.

● See page 35 for more details about the display.

2. Under"Administrator Tools" select "Recording Settings".

※ To open Administrator Tools, the proper Login ID and Password are needed.

3. Click the [OK] button.

NOTE:

While downloading recorded data, DO NOT use the back button on the browser to view previous pages AND DO NOT use the refresh button to reload a page.

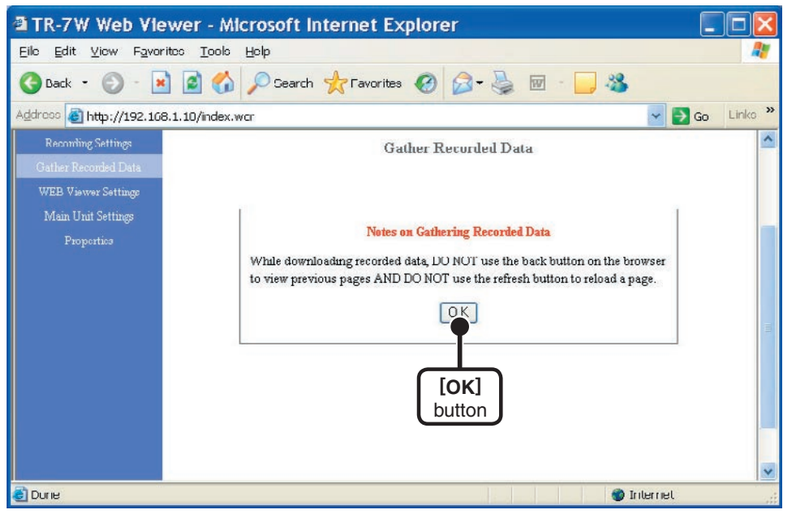
TR-7W Web Viewer - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address http://192.168.1.10/index.wcr
Go Links
Recording Settings
Gather Recorded Data
WEB Viewer Settings
Main Unit Settings
Properties
Gather Recorded Data
Notes on Gathering Recorded Data
While downloading recorded data, DO NOT use the back button on the browser to view previous pages AND DO NOT use the refresh button to reload a page.
OK
[OK] button
Done
Internet

4. Click the [Download] button.

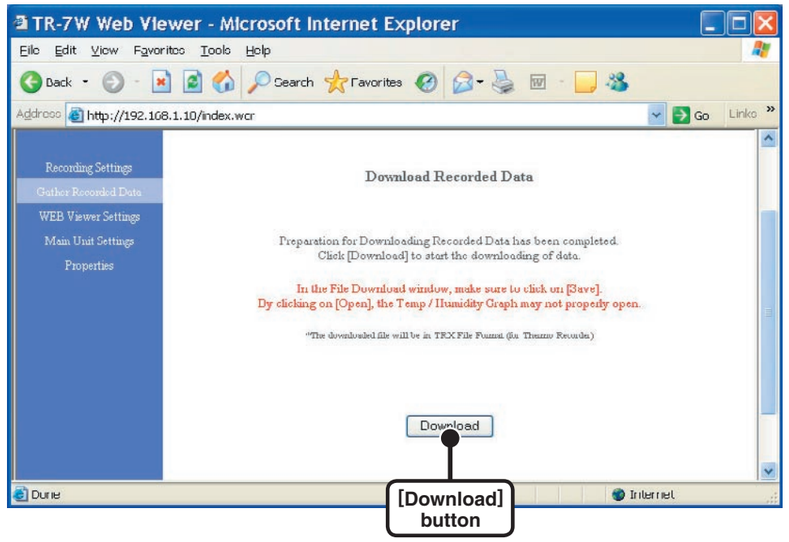
TR-7W Web Viewer - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address http://192.168.1.10/index.wcr
Go Links
Recording Settings
Gather Recorded Data
WEB Viewer Settings
Main Unit Settings
Properties
Download Recorded Data
Preparation for Downloading Recorded Data has been completed.
Click [Download] to start the downloading of data.
In the File Download window, make sure to click on [Save].
By clicking on [Open], the Temp / Humidity Graph may not properly open.
*The downloaded file will be in TRX File Format (for Thermo Records)
Download
[Download] button
Done
Internet

5. In the "File Download" Window, click the [Save] button, assign a name to the file and save to complete the process.

NOTE:

By clicking the [Open] button, the "Temp / Humidity Graph" may not function properly. Please do not click the [Open] button.

6. After the downloaded data has been saved by clicking the [Open File] button, the [Temp / Humidity Graph] will appear.

● Clicking the [Open Folder] button will open the folder in which the data was saved.

● Clicking the [Close] button will finish the process.

Operating the Temp / Humidity Graph

■ How to Open

From the list of programs in the Window's Start Menu, click on "TR-7W for Windows"–"Temp / Humidity Graph".

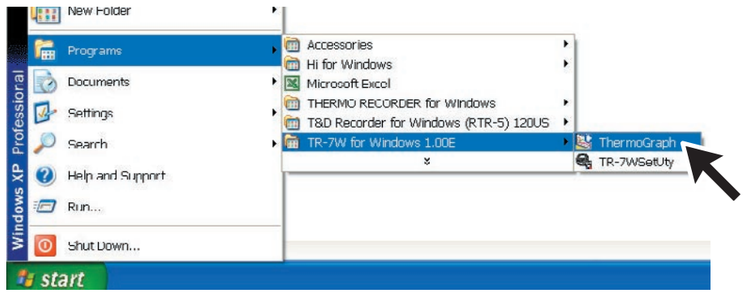

■ Using Help

For details about how to use the software, please see the explanations in the Software Help Menu.

- In the Menu Bar, click "Help"–"Search by Topic", then click on one of the tabs "Contents", "Index", or "Search Text" to search for the topic or term you are unsure about or have questions about.

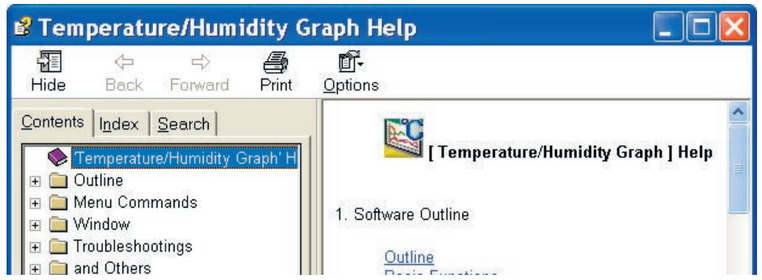

Contents :
By clicking on one of the marks next to the topics listed, you can find detailed information for that subject.

Index :
To get an explanation from a keyword, select a keyword from the Index list, and then click the [View] button.

Search :
Enter the keyword you wish to search for and click the [Start Search] button. All topics that contain the keyword will be displayed. By selecting a topic and clicking the [View] button at the bottom, a detailed explanation will appear.

- By clicking the help button in a dialog box, an explanation for that dialog box will appear.
- In the Graph window, by clicking on the "?" in the Toolbar, simple explanations will appear the next time you click on a menu, an icon, or objects in the main window.

■ Temperature / Humidity Graph Display Names and Functions

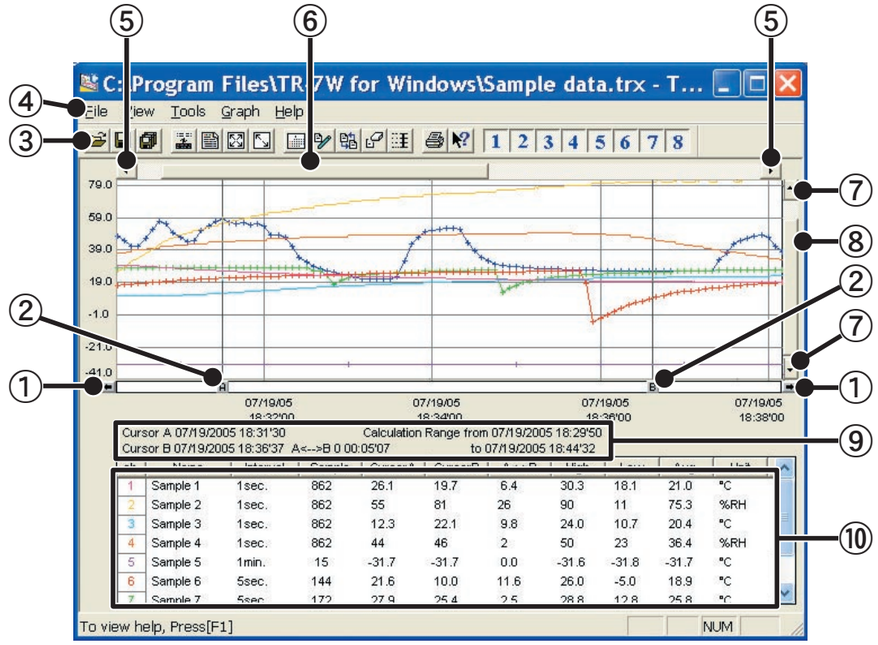

① A and B Cursor Movement Buttons
By clicking the arrow buttons, you can simultaneously move the A/B cursors.

② A and B Cursor Buttons
Click and drag the A or B button to move the cursor to the left or right.

③ Toolbar
Buttons appear for frequently used commands.

④ Menu Bar
Click on the desired menu in the Menu Bar to set or display each function from which you can choose from an array of commands.

⑤ Button for Moving Horizontal Axis
The time axis moves by clicking these arrow buttons.

⑥ Horizontal Gauge Bar
By dragging the gauge you can move left and right to the data you want to be displayed.

⑦ Button for Moving Vertical Axis
The vertical axis moves up or down by clicking these arrow buttons.

⑧ Vertical Gauge Bar
By dragging the gauge you can move up and down to the data you want to be displayed.

⑨ A and B Cursor Position Information
The approximate date and time for the A and B cursor positions and the time difference between the A cursor and the B cursor is displayed.

⑩ Channel Info List Display
The detailed data info for each channel 1 to 8 is displayed below the Graph Display.

● Zoom in Using the Mouse

With the left button drag the mouse to outline the area you want to zoom in on.

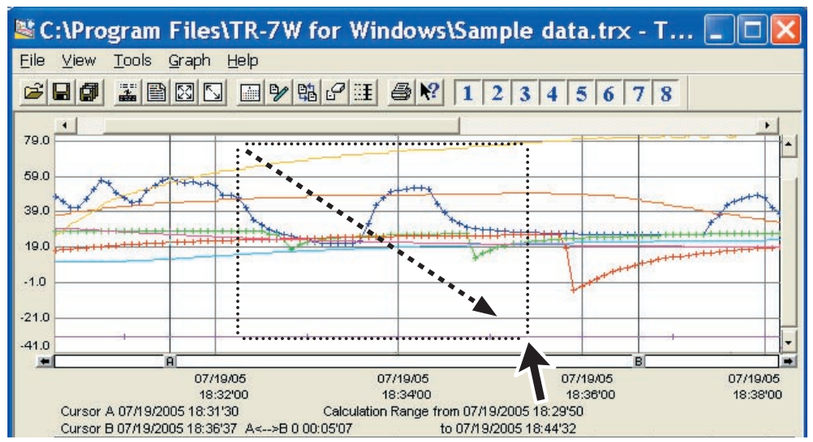

● Menu Display Using the Mouse

By right clicking on the graph, the Menu will be displayed.

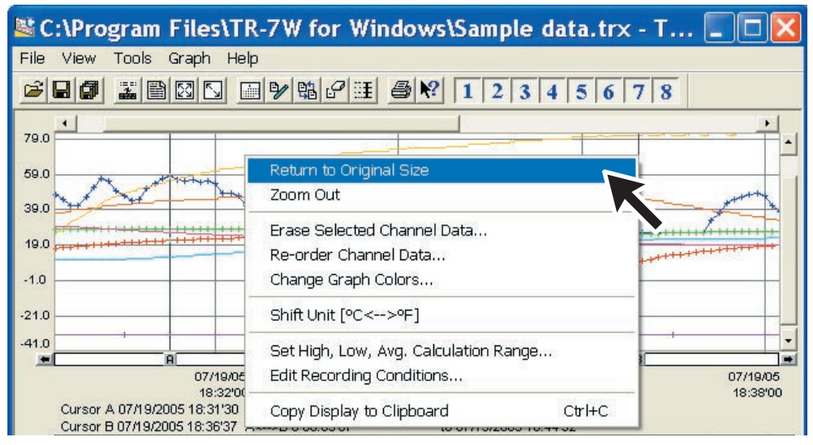
C:\Program Files\TR-7W for Windows\Sample data.trx - T...
File View Tools Graph Help
1 2 3 4 5 6 7 8
Return to Original Size
Zoom Out
Erase Selected Channel Data...
Re-order Channel Data...
Change Graph Colors...
Shift Unit [°C<-->°F]
Set High, Low, Avg. Calculation Range...
Edit Recording Conditions...
Copy Display to Clipboard Ctrl+C
Cursor A 07/19/2005 18:31'30
Cursor B 07/19/2005 18:36'37

■ Data List Display Part Names and Functions

This is a list of the data that was displayed in graph form. (From the "View" Menu)

● [Date / Time] Button:

By clicking this button, you can shift the display between the recorded date and the amount of elapsed time since recording started.

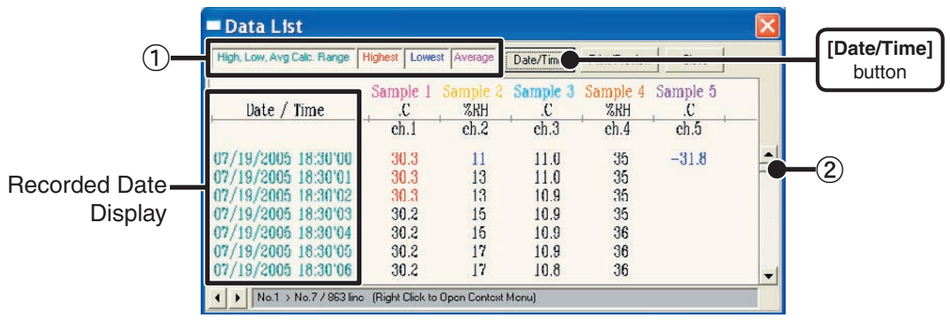

① The highest value is in RED, lowest is in BLUE, and the average is in PINK.

② Scroll Bar: By dragging it up and down you can move to the data you want.

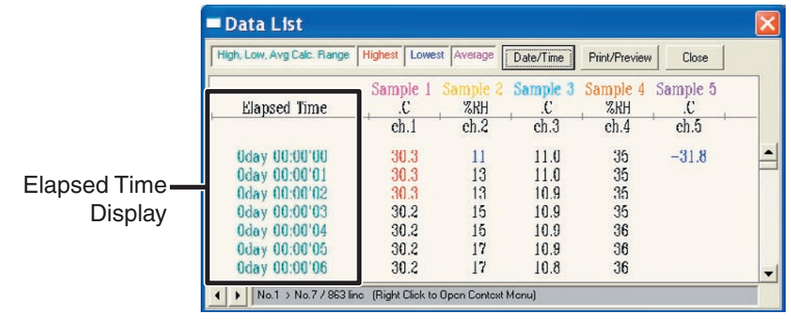
Data List
High, Low, Avg Calc. Range
Highest
Lowest
Average
Date/Time
Print/Preview
Close
Elapsed Time Display
Elapsed Time
Sample 1 .C ch.1
Sample 2 %RH ch.2
Sample 3 .C ch.3
Sample 4 %RH ch.4
Sample 5 .C ch.5
0day 00:00'00 30.3 11 11.0 35 -31.8
0day 00:00'01 30.3 13 11.0 35
0day 00:00'02 30.3 13 10.9 35
0day 00:00'03 30.2 15 10.9 35
0day 00:00'04 30.2 15 10.9 36
0day 00:00'05 30.2 17 10.9 36
0day 00:00'06 30.2 17 10.8 36
No.1 > No.7 / 863 line (Right Click to Open Context Menu)

● Menu Display Using the Mouse

By right clicking on the graph, the Menu will be displayed.

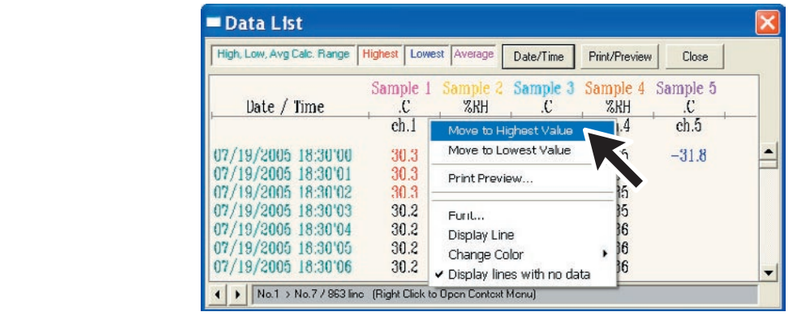

Making Changes to the Graph Display

■ Changing Colors of Data Display Area : From the [View] Menu

You can change the letters used in the data list display for each channel between monochrome and channel color.

■ Viewing and Hiding Channels in Graph : From the [View] Menu

You can choose to view only the selected channels in the Graph.

1. By moving the mouse to [Selected Channels ON / OFF], the channel numbers are displayed.

2. Click the channel number to remove or place a check mark. Only those channels with a check mark next to the number will be displayed in the Graph.

※ The same operation can be done by clicking on the channel number icons in the Toolbar.

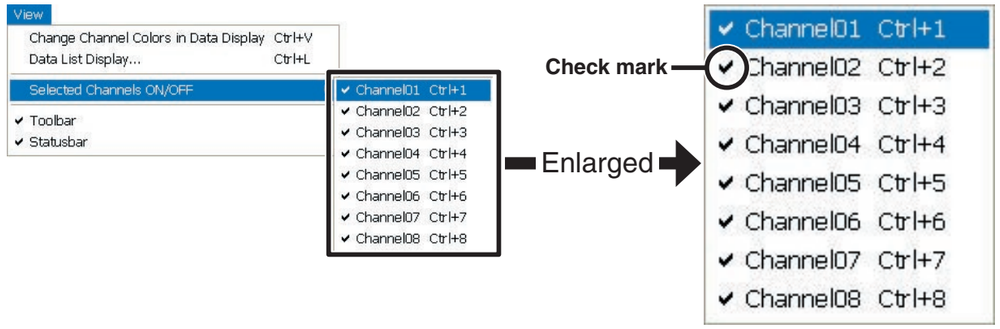

■ Setting the Max. Min. Avg Calculation Range : From the [Tools] Menu

1. Set the calculation range in the [Set High, Low, Avg. Calculation.

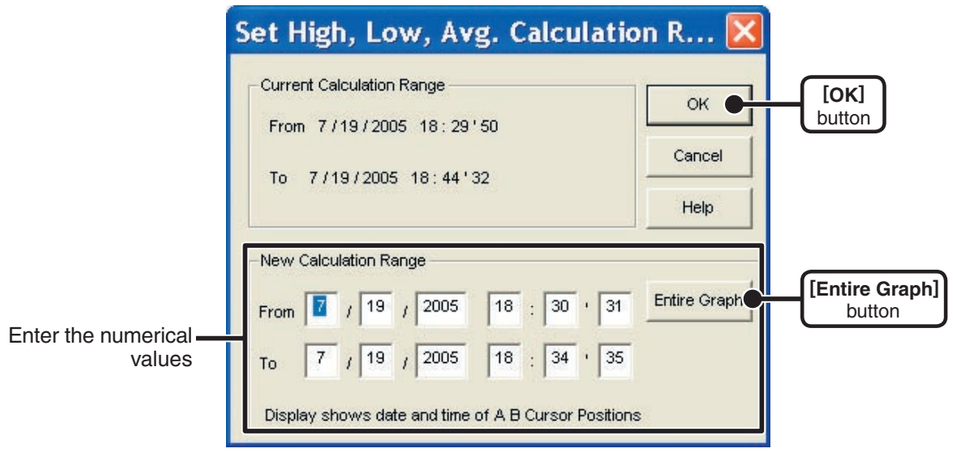
Set High, Low, Avg. Calculation R...
Current Calculation Range
From 7/19/2005 18:29'50
To 7/19/2005 18:44'32
OK
Cancel
Help
[OK] button
New Calculation Range
From 7 / 19 / 2005 18 : 30 ' 31
To 7 / 19 / 2005 18 : 34 ' 35
Entire Graph
[Entire Graph] button
Enter the numerical values
Display shows date and time of A B Cursor Positions

- By clicking the [Entire Graph] button, the dates and times for the entire graph will be displayed.
- If in the graph display, place the A cursor at the position for the beginning of the calculation range and the B cursor at the end of the range, and those dates and times will appear as the new range in the [Set High, Low, Average Calculation Range] Display when it is opened.

2. Click the [OK] button to finish.

■ Editing Recording Conditions : From the [Tools] Menu

It is possible to make corrections to channel names and to recording start date and times.

1. By clicking the [Channel. No.] button of the channel you wish to edit, the "Name" and "Started Date / Time" in the "Edit Items" display will show info for that channel number.

- Name: Up to 32 letters can be entered.
- Starting Date/Time : The month, day, year, hour, minute and second can be changed.

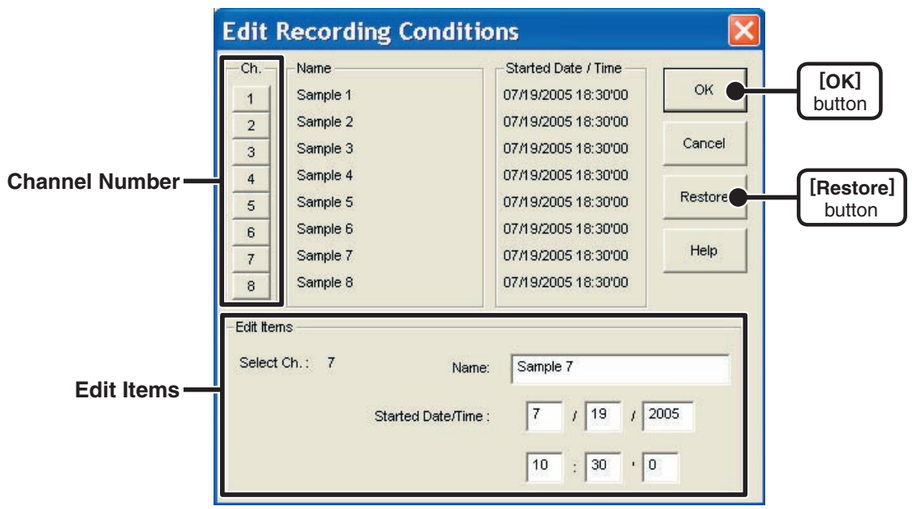

2. Click the [OK] button to finish.

- If you wish to continue to change other channels, repeat the process as in 1.

※ The [Restore] button is only effective while making changes. After clicking the [OK] button the settings cannot be restored to the original settings.

■ Reordering Channel Data: From the [Tools] Menu

You can re-order the data during graph display.
There are two methods to use when re-ordering channels :【Re-order by Dragging a Channel Number】and【Specify the Channel Numbers to be Moved】.

【Re-order by Dragging a Channel Number】

Drag the channel number you wish to move to the newly desired channel number position and drop it.

※ The [Restore] button is only effective while making changes. After clicking the [OK] button the settings cannot be restored to the original settings.

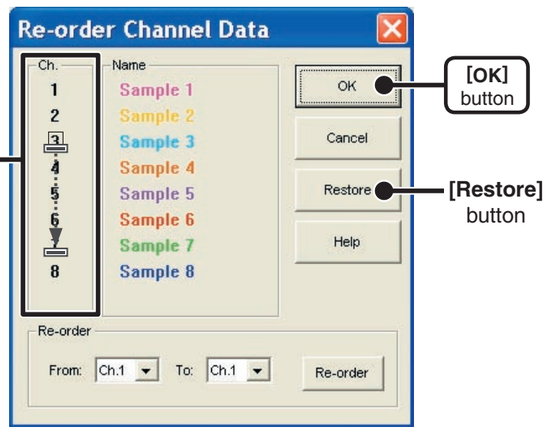

【Specify the Channel Numbers to be Moved】

1. Specify the channels to be moved From : (original position) To : (desired position).

2. Click [Re-order] button to complete the re-ordering process.

※ The [Restore] button is only effective while making changes. After clicking the [OK] button the settings cannot be restored to the original settings.

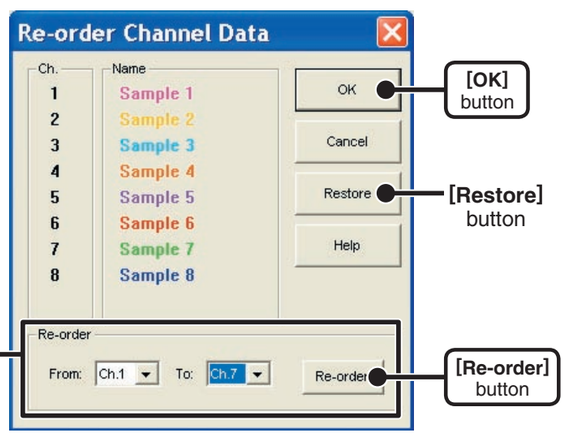

■ Deleting Selected Channel Data: From the [Tools] Menu

1. Put a check on the channel number you wish to erase.

2. By clicking on the [OK] button, the deletion will be completed.

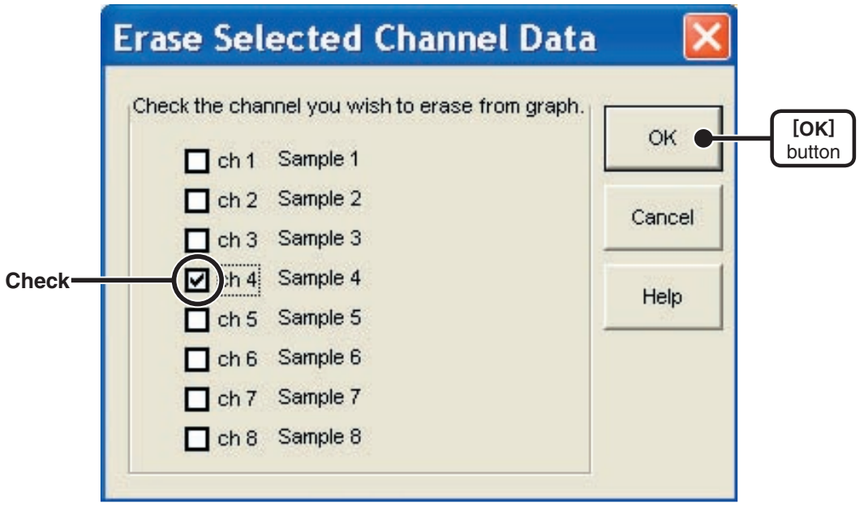

■ Shift Unit (℃⇔°F) : From the [Tools] Menu

By clicking on [Shift Unit (℃⇔°F)], you can automatically change the temperature unit scale in the graph display and in the channel info list.

■ Change Graph Colors : From the [Tools] Menu

1. Click the channel number of which you wish to change the color.
You can change the colors of the channel name, graph background, the scale lines, the enlarged box area, and the AB cursors.

2. Choose the color you want and click the [OK] button.

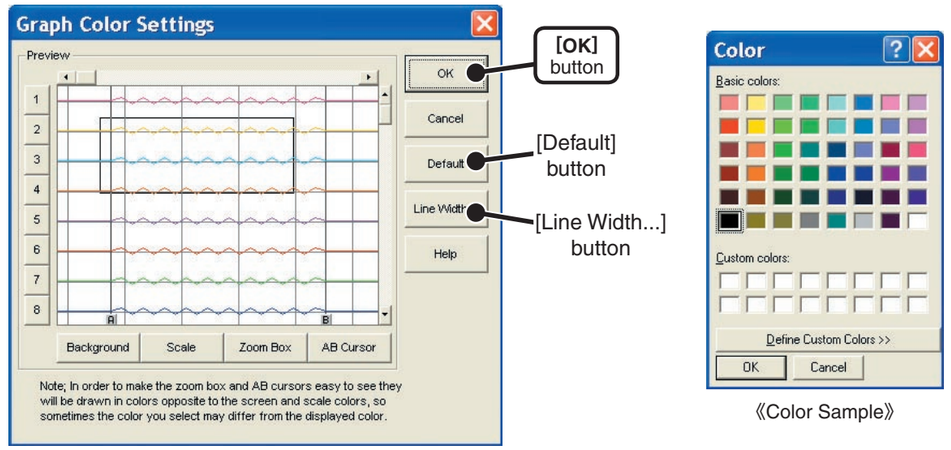

《Color Sample》

3. After confirming the color, by clicking the [OK] button the change will be completed.

※By clicking the [Default] button, you will return to the color settings when the software was opened.

【Line Width Settings】

Change the width of the data lines and the scale lines.

1. Click on the [▼] button to change the width of the graph / scale lines.

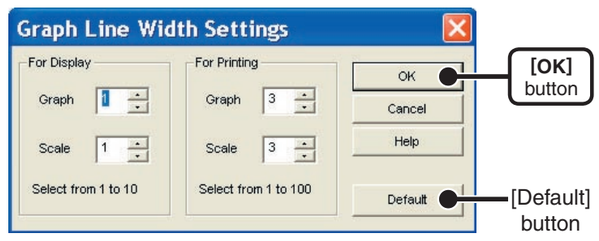

- Every time you click on ▲ , the numerical value gets larger.
- Every time you click on ▼ , the numerical value gets smaller.

2. Click the [OK] button to complete the changes.

※By clicking the [Default] button, you will return to the color settings when the software was opened.

■ Copy Display to Clipboard : From the [Tools] Menu

By clicking [Copy Display to Clipboard], you can copy the currently displayed window to the clipboard and make use of the graph by pasting to other software.

Operating the Graph

■ Returning to Original Size

Clicking here will return the graph to its original size.

■ Zooming In and Out

Zooms in or out one step at a time.

■ Moving the A/B Cursors Right and Left

Simultaneously move the AB Cursors to the right or left.

■ Moving Right and Left on the Graph

Move the Graph Display to the right or left.

■ Moving Up and Down on the Graph

Move the Graph Display up or down.

■ Vertical Axis Settings

Set the vertical axis scale (temperature).

1. Check either [Auto] or [Manual].

- AUTO : The vertical axis will automatically be changed according to the values of the data.
- MANUAL : You can set the upper and lower values of the vertical axis scale.

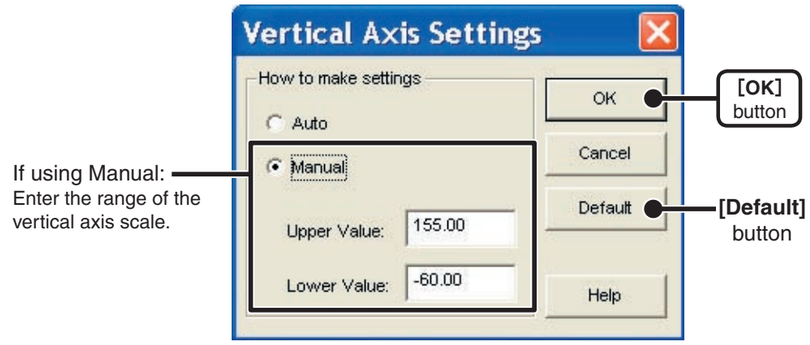

2. Click the [OK] button to finish.

※ By clicking the [Default] button, you will return to the settings when the software was opened.

Saving Recorded Data

If you have edited any graph displayed data we suggest that you save it as you see necessary.

■ 3 Ways to Save Files.

- **In the [File] Menu, select [Overwrite All Data]**
  Will save any changes to file without changing File Name and Saving Location.
  The same operation can be carried out from [Save] in the Toolbar.
- **In the [File] Menu, select [Save All Data as...]**
  Save with a new File Name.
- **In the [File] Menu, select [Save Displayed Data]**
  Save only that data in the current display.
  This is handy when you wish to save only the desired data.

EX: [Save All Data as...]

1. Click [Save All Data as...] in the [File] Menu.

2. Specify the [Location] and enter a [File Name].

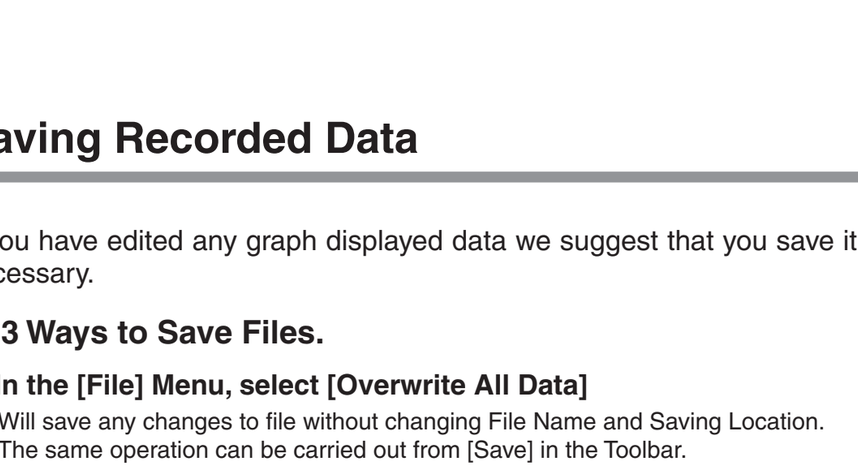

3. Click [Save] to complete the saving process

Creating Text File

By saving the recorded data as text file, you can create a file type that can be read by common spreadsheet software.

1. Click [Save in Text File] in the [File] Menu.

2. Select the [Text File Type] and [Range to be Saved], and click [OK].

- Comma, Tab, Space, and Semi-colon are codes used by common spreadsheet software, such as Excel and Lotus, when reading Text File to divide cells.

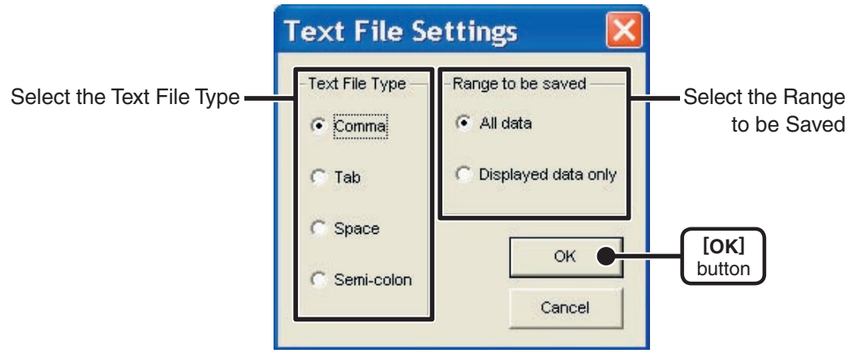

3. Designate the location to which the file should be saved and click [Save] to create and save the data as a Text File document.

- The extension for the created file will be [.txt].

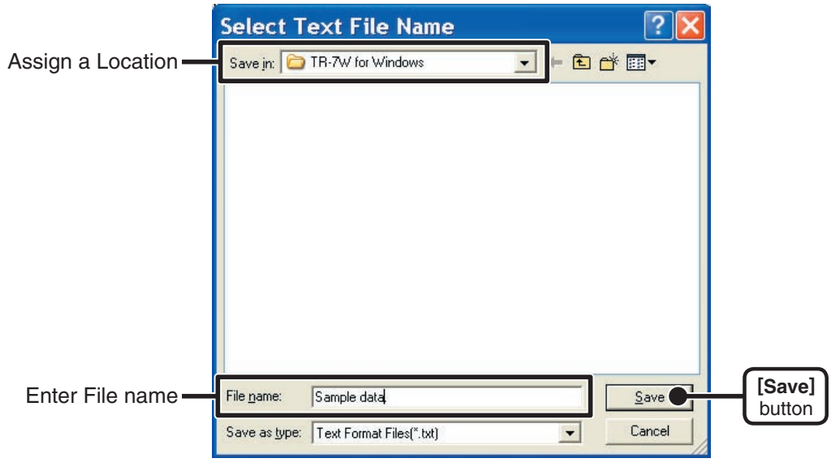

NOTE :
Text File cannot be read into the [Temp / Humidity Graph].

Opening a Saved File

To open a previously saved file, designate the file name to open it.

1. Click [Open] in the [File] Menu.

2. Select the name of the data you wish to open and click [Open] to view the data in graph form.

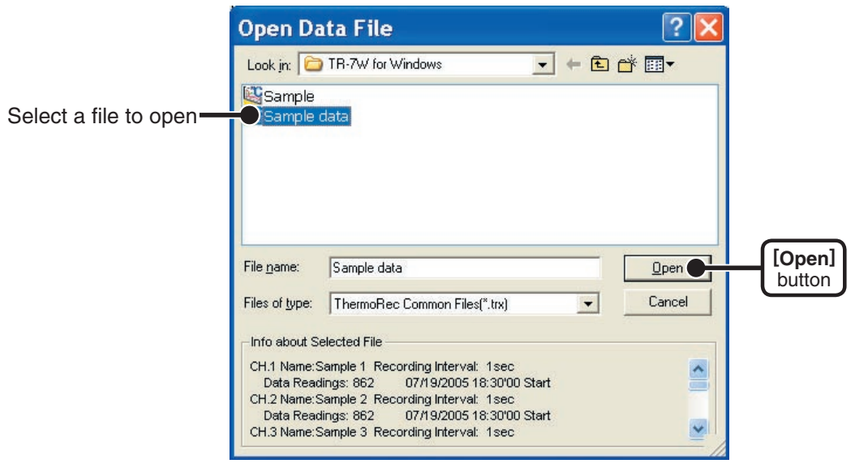
Open Data File
Look in: TR-7W for Windows
Sample
Sample data
Select a file to open
File name: Sample data
Open
Files of type: ThermoRec Common Files(*.trx)
Cancel
[Open] button
Info about Selected File
CH.1 Name:Sample 1 Recording Interval: 1sec
Data Readings: 862 07/19/2005 18:30'00 Start
CH.2 Name:Sample 2 Recording Interval: 1sec
Data Readings: 862 07/19/2005 18:30'00 Start
CH.3 Name:Sample 3 Recording Interval: 1sec

Auto-clock Settings (SNTP Settings)

If you make the TR-7W clock settings manually, the clock will lose its settings upon removal of the AC adaptor or after restarting the system. However, by making settings to enable the SNTP server it is possible to have the clock automatically reset to the current time upon restarting the system.

If the TR-7W's date and time are set incorrectly, the programmed recording start time, the download data time, and the monitor current readings time will all be wrong. We therefore strongly suggest that you make settings to use the SNTP server.

※**The SNTP (NTP) server is a server that automatically adjusts the clock settings of a terminal on a network.**

1. Open the [TR-7W Settings Utility], click on the [Detailed Network Settings] tab, and gather the settings for the TR-7W logger that you wish to make settings for.

2. Click the [Change Settings] button and the Detailed Network Settings window will appear, where you can make changes to the settings.

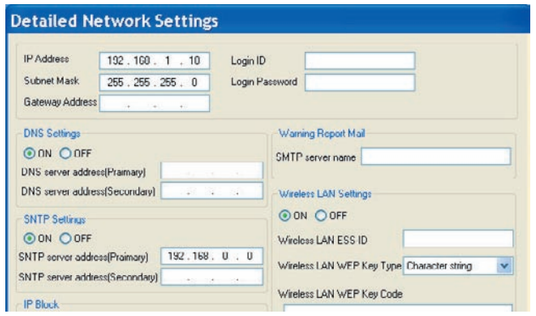

3. Under [SNTP Settings], click "ON" to change the setting.

[How to find an NTP server]

- If you are connected to an intra company LAN, you may already have an NTP server for your network. Please ask your network administrator for details.
- If you are connected to the Internet, some providers will have an NTP server open to the public. Please ask your provider for details.
- If you wish to use an NTP server that is open to the general public on the Internet, it is possible to make a search for [NTP server] using Yahoo or Google. Many universities or scientific facilities will have the NTP server open to the public.Make sure to use a server which is the closet to your location.
  Please also make sure to check whether connection is free and without limitation.
  It should also be noted that depending on your Internet connection and your firewall settings, the NTP packet may be prohibited from being accepted into your system.

4. After making the settings, enter the info for the recipient of the settings and click the [Send Settings] button.

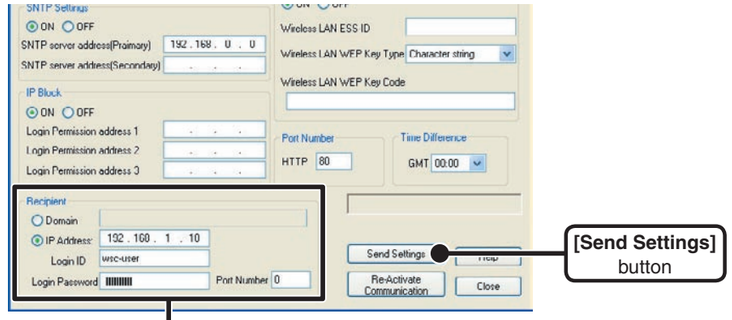

5. A message will appear asking you if it is OK to restart the system. Click the [Yes] button to restart.

- The new settings will not become valid until the TR-7W communication function is restarted.

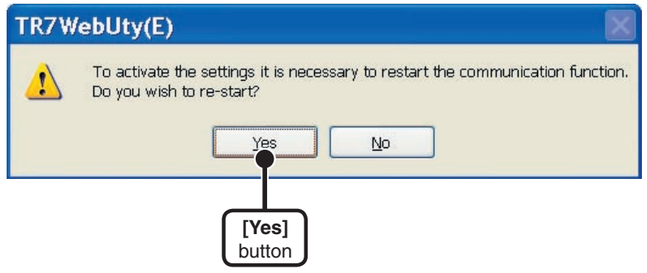

6. After the restarting has been completed, the settings will have been successfully made.

Monitoring Current Readings

■ Viewing Current TR-7W Readings

1. Open the Web Viewer for the TR-7W of which you wish to view the current readings.

● See page 35 for more details about the display.

2. The Monitor Current Readings display will automatically open.

※ If the system has been restarted with the SNTP (for automatic clock settings) disabled, the [Clock and Calendar Settings] window will appear only the first time the Web Viewer is opened.

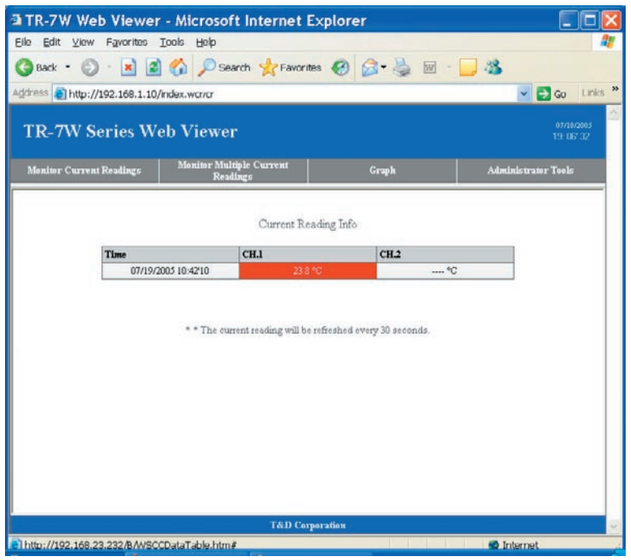

■ Viewing Current Readings from a Multiple Number of TR-7W Loggers

It is possible to view simultaneously in one browser, the current readings from a multiple number of registered TR-7W loggers via one TR-7W unit (Registrant).

※ It is possible to register up to 10 units into one Registrant logger.
※ By also registering the Registrant logger it is possible to view the current readings of that unit as well.

1. In "TR-7W Settings Utility", click on the "Gather Current Readings Settings" Tab.

2. Enter the Registrant Info.

● A list that shows all of the IP addresses and domain names with which successful communication has occurred until now can be viewed in the [History] pull down menu. You can select an IP address from the [History] pull down menu.

※ Note that if you have turned [OFF] the [Login History] in the [Menu], or if you have deleted the Login history by having clicked [Clear Login History] the Settings History will not appear.

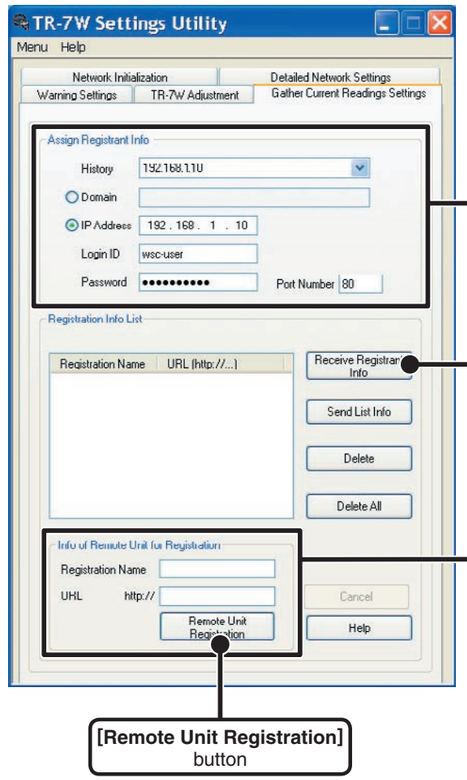

3. By clicking on the [Receive Registrant Info] button, you can easily confirm the registration info.

● All registration info will be displayed in the [Registration Info List].

4. Register the TR-7W unit(s) as Remote Units.

● **Registration Name**
Will appear when viewing the current readings.
※ You cannot use these symbols: <, >, " or a space.

● **URL**
As the URL enter the IP address or Domain Name for the TR-7W unit you wish to register.

5. Click the [OK] button to finish registration.

※ If you wish to continue to register more units, repeat the process as in 4 and 5.

6. Open the Web Viewer for the TR-7W you have set as the Registrant Logger.

● See page 35 for more details about the display.

7. By clicking [Monitor Multiple Units], you will be able to view the current readings for all of the units which you have registered.

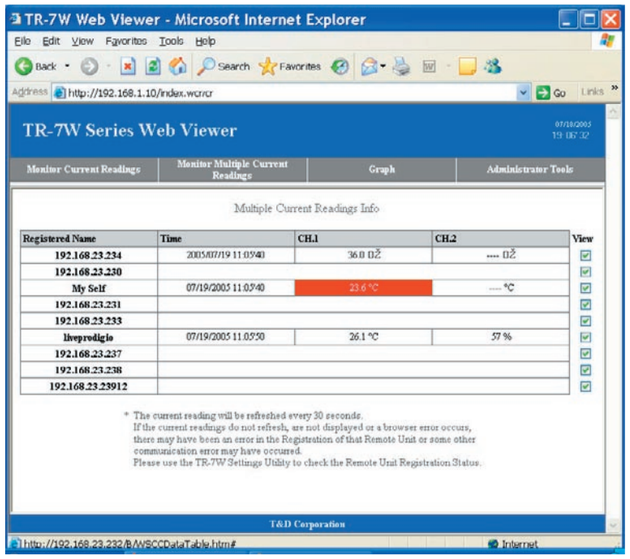

【"TR-7W Settings Utility"–"Gather Current Readings Settings"Tab Window】

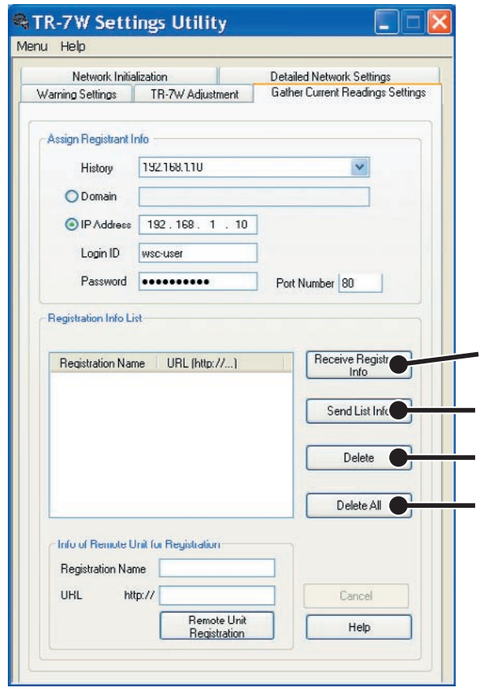

● [Receive Registrant Info] Button

The remote TR-7W registration info that had been entered into the Registrant Info will be displayed.

● [Send List Info] Button

By clicking on the [Send List Info] button, the registration info in the list will be sent to the Registrant TR-7W. This is particularly helpful when you wish to send the same registration info to a different Registrant Logger.

● [Delete] Button

Pressing this will delete the selected remote unit from the [Registration Info List].

● [Delete All] Button

Pressing this will delete all registration info from the TR-7W which is the recipient of the communication. If registration info for any remote units is displayed in the list, all of that info will be erased. If a communication error occurs at this time, the registration info will not be erased from the recipient of the communication.The best way check as to whether the deletion was successful or not, is to receive the Registrant Info.

Warning Report Settings

With this you can send warning report mails to a registered Internet mail address. Also, in the Monitor Current Readings Window, the channel for which the warning occurred will appear RED.

● Temperature / Humidity Warning Report Mail

The TR-7W checks the current reading every minute and sends a warning report mail if the upper or lower limit has been exceeded. Because of this, a second warning report mail will not be sent until the warning settings have been changed, the reporting has been stopped, or the measured value falls back within the acceptable range and once again exceeds a limit.
If no Upper or Lower limit settings have been made, only the Backup Battery Power Warning Mail will be functioning.

● Backup Battery Power Warning Mail

The TR-7W will check the voltage of the backup battery once a day at 12:00 pm. If the backup battery power is below standard, a warning mail will be sent.

1. In "TR-7W Settings Utility", click on the [Warning Settings] Tab.

2. Make the desired settings.

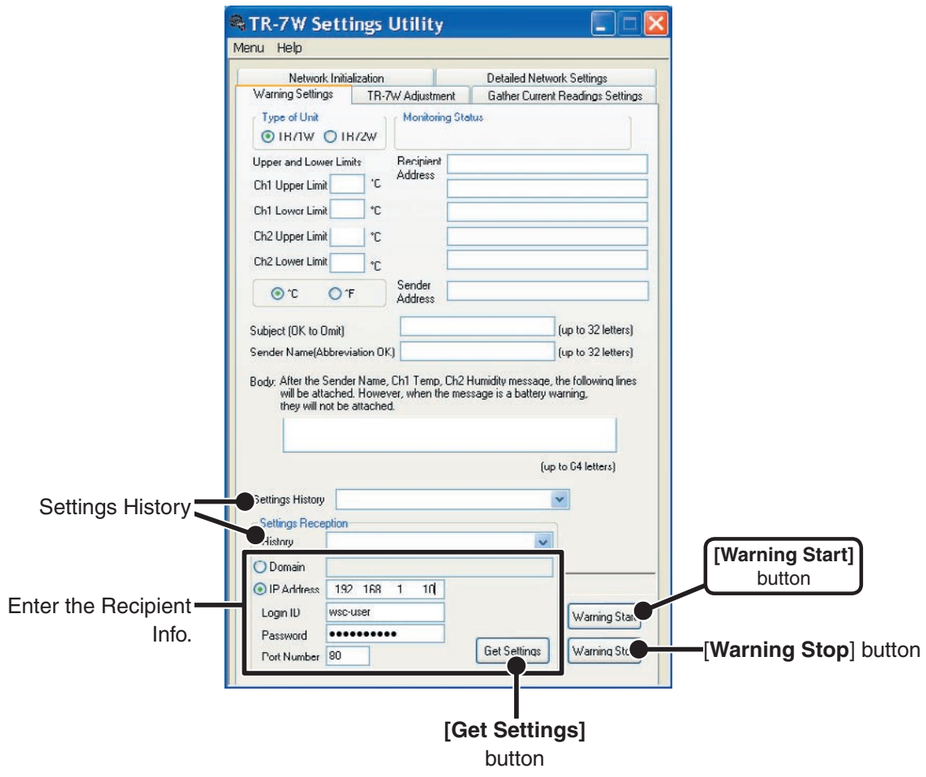

● Type of Unit

Select the type of device.

● Monitoring Status

"Monitoring Warnings" or "Warnings Stopped" will appear.

● Upper and Lower Limit Settings

The setting ranges are as follows: Temperature: Celsius -60 to 155 / Fahrenheit -76 to 311.1 and Humidity: 0%~100%
You can also select whether to measure and record in Celsius or Fahrenheit.

● Recipient Address

A warning report mail can be sent to up to 5 mail addresses.
The address cannot exceed 128 characters.
※ You cannot use a space.

● Sender Address

This will only used in the mail display to show where a warning report mail has been sent from.
It should be noted that if you assign an imaginary address, in some cases the SMTP server will judge the mail to be SPAM or junk mail and not allow it to be sent. If you do use an imaginary address, make sure the address is permissible on your SMTP server

● Subject

Set the Subject Title for the Warning Mail.
Even if you make no settings here, the title "Warning Report Mail" will be automatically set.
The title can use up to 32 characters.
※ You cannot use a space.

● Sender Name

It is also possible to put the sender name in the body of the message.
The name can use up to 32 characters. ※ You cannot use a space.

● Body of Message

It is possible to send any message you desire along with a warning report mail.
The message can contain up to 64 characters.
※ You cannot use a space.

3. After completing the settings.

- Select Domain Name or IP address and enter.
- You can select from the [History] menu any of the IP addresses with which successful communication has occurred until now.

※ Note that if you have turned [OFF] the [Login History] in the [Menu], or if you have deleted the Login history by having clicked [Clear Login History] the Settings History will not appear.

4. In the "Detailed Network Settings" Tab, click on the [Change Settings] button, and the "Detailed Network Settings" Window will appear.

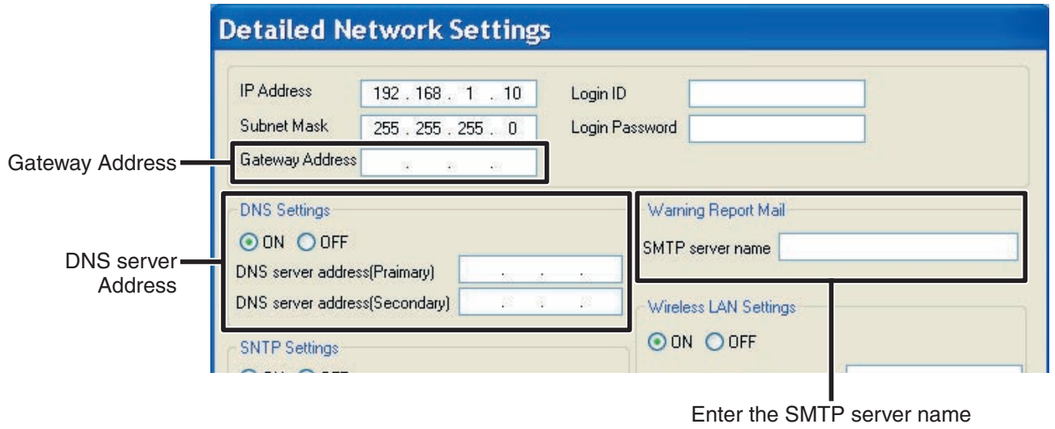

5. Enter the SMTP server name in the [Warning Report Mail] box.

※ If necessary, enter a gateway address and a DNS server address.

6. After making the settings, enter the recipient info and click the [Send Settings] button to finalize the settings.

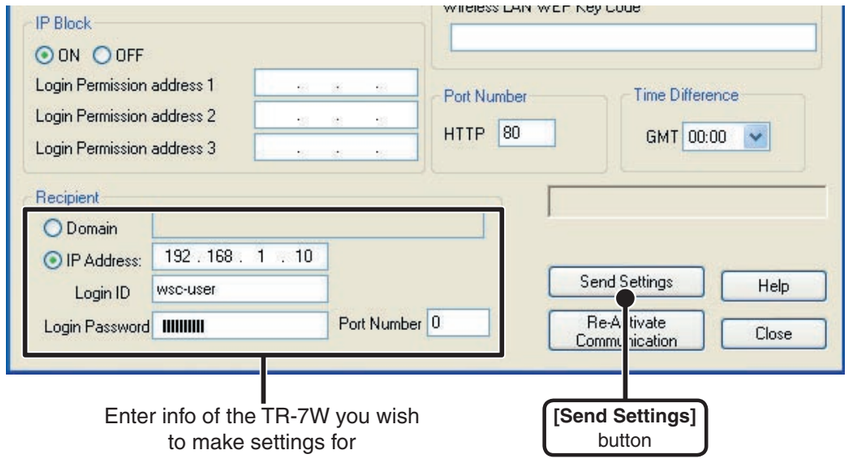

● [Get Settings] Button

Receive the Settings of the Registrant.
If you wish to make changes to any of the settings, click on the [Get Settings] button to receive the current TR-7W settings and make any necessary changes.

● [Warning Stop] Button

Press to stop the current warning monitoring.

Adjustment Function

By entering the adjustment values beforehand, it is possible to view and record the adjusted measurement values. There are two methods of adjustment: adjusting by one point or adjusting by two points. Adjustment for differences will be based upon the following simple equation Y=aX+b. (X equals the measured value and Y equals the value after adjustment.)

NOTE:

Adjustment settings cannot be made while a recording is in session. Please make settings after having stopped recording.

1. Check the channel you wish to adjust.

2. Check either "1-Point Adjustment" or "2-Point Adjustment" and enter the adjustment values.

NOTE:

- When adjusting at 2 points, make sure the difference in points is at least 10℃ .
- When measuring in a wide range and adjusting at 2 points, make sure that the adjustment values reflect the range you are measuring.
- We cannot guarantee that after carrying out adjustment the measuring accuracy will improve for all measuring ranges.

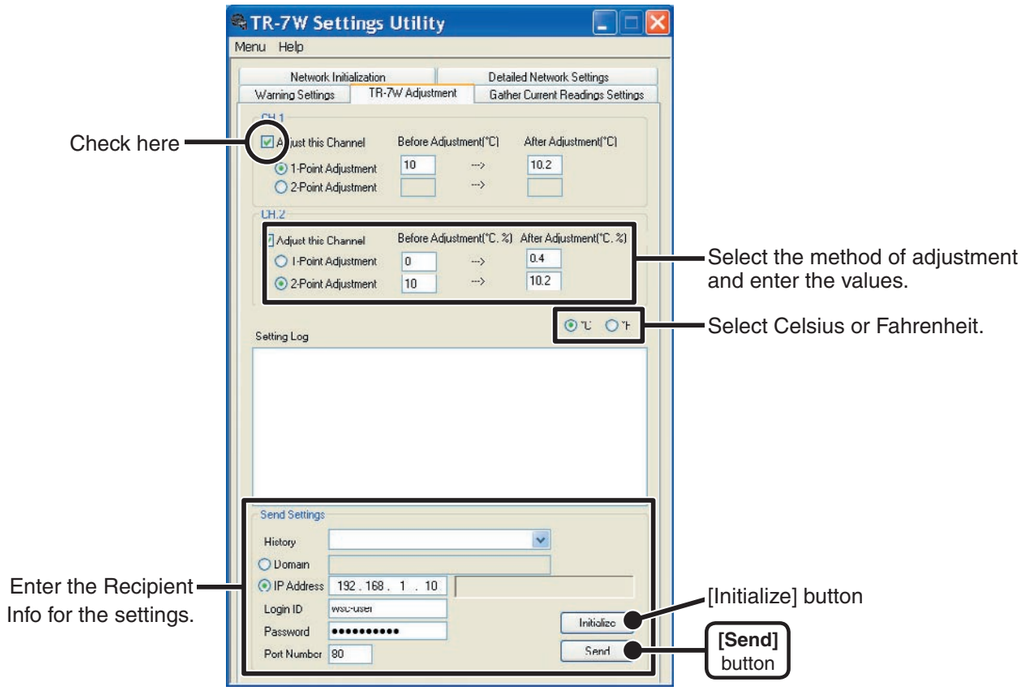

【1-Point Adjustment】

This adjustment method changes only the offset (b) where the slope (a) is considered 1.
For example, TR-71W is measuring 10℃ , but the standard says the actual measurement should be 10.2℃ . Enter 10 in the Before Adjustment box and 10.2 in the After Adjustment box. The conversion equation will be Y=X+0.2 and for all measurements and an adjustment to the offset of +0.2 will be made.

Rough Guidelines for Adjustment : Use when measuring in a range of ±20℃ .

【2-Point Adjustment】

The adjustment equation will be calculated from two points: the slope (a) and the offset (b).
For example, the TR-71W reads 0℃ when the standard thermometer reads 0.4℃ ,and reads 10℃ when the standard says the true measurement is 10.2℃. In this case the slope (a) is 10.2-0.4 /10-0 = 0.98.
The offset is 0.4, so the conversion equation becomes Y=0.98X+0.4.
The range of the slope is 0<a<=2. Entries are valid to one decimal point, but after calculation up to four digits are valid for the slope and offset.

Rough Guidelines for Adjustment : Use when measuring in a wide range.

3. Select 〈Celsius〉 or 〈Fahrenheit〉, enter the address of the target recipient, and click the [Send] button to finish the adjustment settings.

- Select Domain Name or IP address and enter.
- You can select from the [History] menu any of the IP addresses with which successful communication has occurred until now.

  ※ Note that if you have turned [OFF] the [Login History] in the [Menu], or if you have deleted the Login history by having clicked [Clear Login History] the Settings History will not appear.

● [Initialize] Button

Clears any previous adjustment equation(s) from both channels and initializes the device.

Viewing Current Readings via Cell Phone

It is also possible to view current temperature and humidity readings via a cell phone browser.

1. Open the URL entry display and enter the URL for the TR-7W logger you wish to view and press enter.

2. Select the format that displays best on your phone.

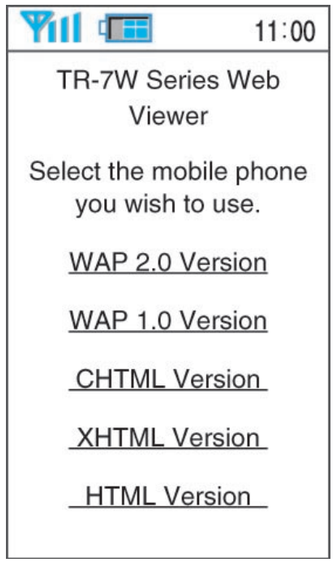

3. The Current Readings display will appear.

NOTE:

- To view the current readings monitor via cell phone, it is necessary to open the TR-7W to the public on the Internet.
- The current readings will not be automatically refreshed. You will have to use the browser refresh function on you cell phone.

Graph

Measurements taken by the TR-7W loggers can be shown in graph form which updates every 10 minutes and can show up to 1 week's worth of data.
(The browser will be refreshed every 5 minutes.)

※ **To view graphs in your browser, it is necessary to have Java Runtime Environment (JRE) installed on your computer. If you cannot view graphs, please download and install the Java Runtime Environment from the Sun Microsystems Homepage. See page 80 for details.**

1. Open the Web Viewer for the TR-7W of which you wish to view the current readings.

● See page 35 for more details about the display.

2. By clicking on Graph, the Temp / Humidity Graph will appear.

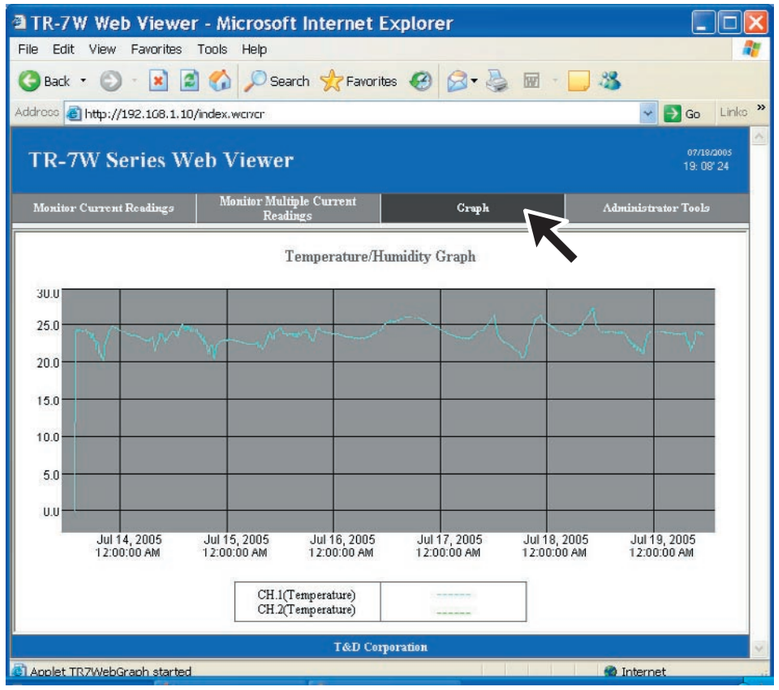

If any of the following operations are performed, all data in the graph will be erased.

- If the communication function is restarted from the TR-7W Setting Utility.
- If the AC adaptor plug is removed.
- If you have restarted the system in the Web Viewer under "Main Unit Settings" – "Restarting the System"

WEB Viewer Settings

Make settings for names of the Web Viewer Main Title, Window Title and Footer.

1. Open the Web Viewer for the TR-7W you wish to make settings for.

● See page 35 for more details about the display.

2. Under "Administrator Tools", select "Web Viewer Settings".

※ To open Administrator Tools, the proper Login ID and Password are needed.

3. Make any desired changes to the names by deleting the old name and entering a new one.

※ The following !, < >, ?, { }, [ ], or ; cannot be used.

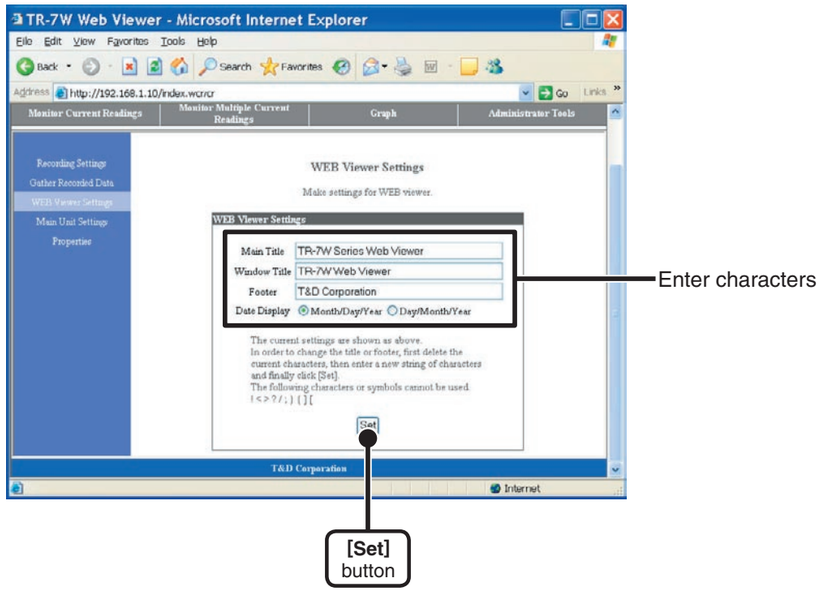
TR-7W Web Viewer - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address http://192.168.1.10/index.wcrcr
Monitor Current Readings
Monitor Multiple Current Readings
Graph
Administrator Tools
Recording Settings
Gather Recorded Data
WEB Viewer Settings
Main Unit Settings
Properties
WEB Viewer Settings
Make settings for WEB viewer.
WEB Viewer Settings
Main Title TR-7W Series Web Viewer
Window Title TR-7W Web Viewer
Footer T&D Corporation
Date Display Month/Day/Year Day/Month/Year
The current settings are shown as above.
In order to change the title or footer, first delete the current characters, then enter a new string of characters and finally click [Set].
The following characters or symbols cannot be used.
! < > ? / ;) ( ) [ ]
Set
T&D Corporation
Internet
Enter characters
[Set] button

4. Click the [OK] button to finish.

The changes will go into effect by either clicking the [Refresh] button in your browser or by reopening the browser.

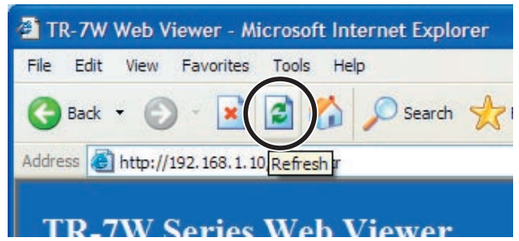

Main Unit Settings

You can make Main Unit settings in TR-7W Web Viewer under "Administrator Tools" –"Main Unit Settings".

※ To open Administrator Tools, the proper Login ID and Password are needed.

■ Clock and Calendar Settings

If the TR-7W's date and time are set incorrectly, the recording start time, the download data time, and the monitor current readings time will all be wrong. Please make sure to set correctly before beginning to use.

NOTE:
If you make clock settings manually, the clock will lose its settings upon removal of the AC adaptor or after restarting the system.Hence, it is necessary to reset the clock after having restarted the system or having lost AC power.

1. Entering the Current Time and Date.

- By clicking [Enter your Local Time], your current computer settings will automatically be entered. If using [Enter your Local Time], please make sure that your computer clock settings are correct.

2. Click the [Set Clock] button to send the date and time settings to the data logger and complete the setting.

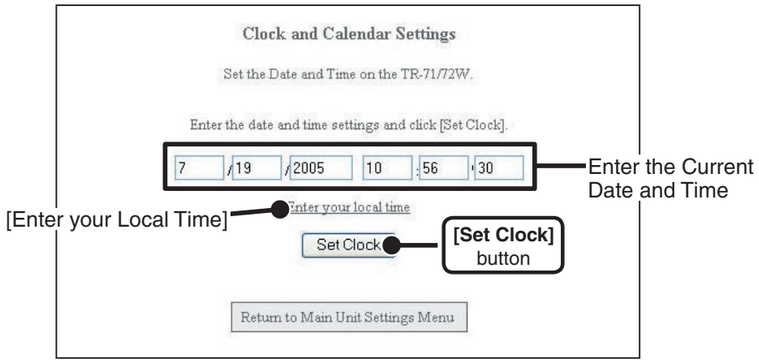
Clock and Calendar Settings
Set the Date and Time on the TR-71/72W.
Enter the date and time settings and click [Set Clock].
7 /19 /2005 10 :56 :30
Enter the Current Date and Time
[Enter your Local Time]
Enter your local time
Set Clock
[Set Clock] button
Return to Main Unit Settings Menu

■ Buttons Setting

Here it is possible to deactivate the buttons on the TR-7W logger.

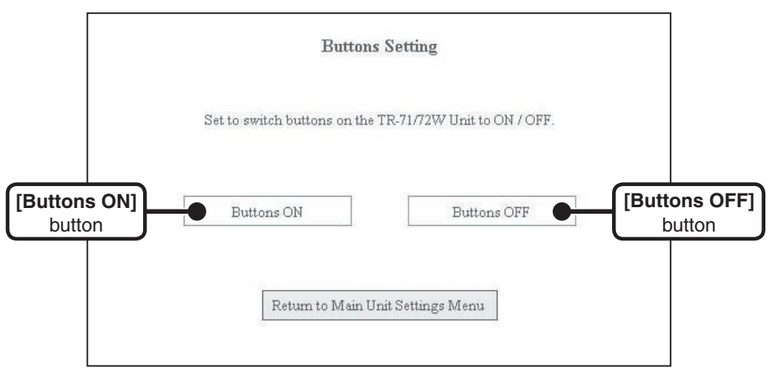
Buttons Setting
Set to switch buttons on the TR-71/72W Unit to ON / OFF.
[Buttons ON] button
Buttons ON
Buttons OFF
[Buttons OFF] button
Return to Main Unit Settings Menu

■ LCD Settings

Make settings here for the TR-7W logger LCD display, including whether to view in ℃ or °F and how to display i.e. View Ch 1 only / View Ch 2 only / View both channels alternately.

1. Click the topic you wish to change.

2. Click the [Set] button to finish.

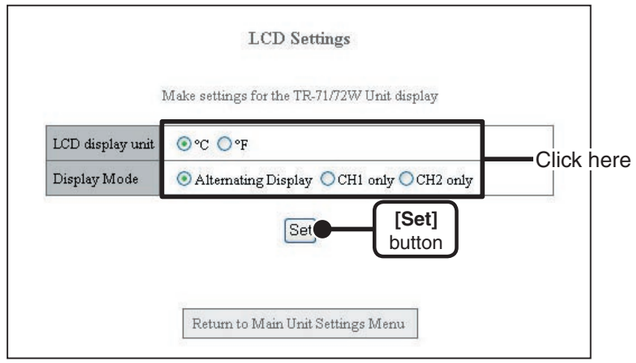

■ Channel Name Settings

You can make settings for the channel name that will be displayed with the downloaded data and in the Temp / Humidity Graph.

1. Enter a Channel Name.

- The name cannot exceed 16 characters.

2. Click the [Set] button to finish.

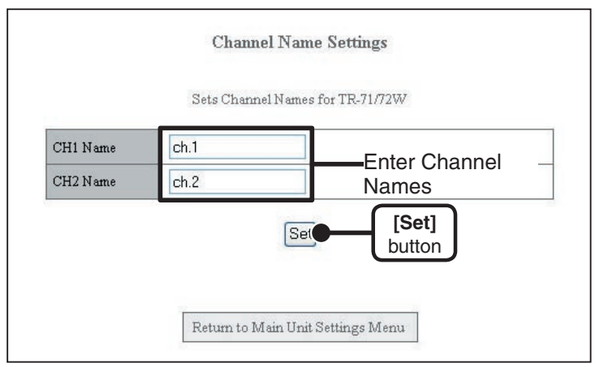

■ Warning Mail Transmission Test

From the TR-7W Settings Utility, it is possible to run a warning mail test to confirm that settings have been made correctly.

1. By clicking [Warning Mail Transmission Test], a confirmation message will appear.

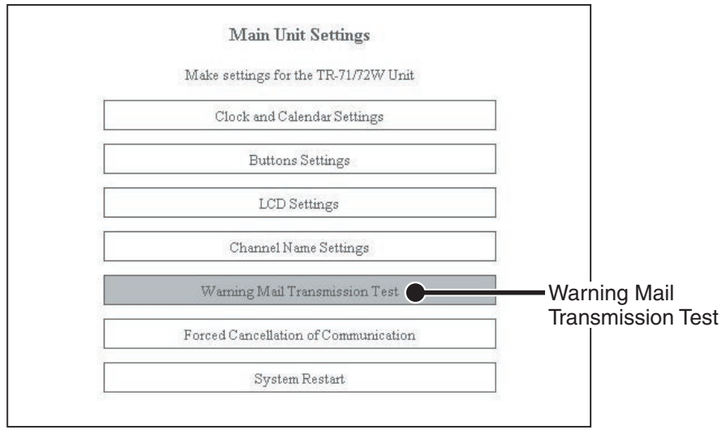

2. Click the [OK] button, and a test mail will be sent to the specified address.

■ Forced Cancellation of Communication

If, while communicating, the message [Another communication is in progress] continually appears, it is possible to forcibly cancel and end communication. You should note that if another computer is downloading data, the breaking of communication will result in a forced cancellation of that downloading as well.

1. By clicking on the [Forced Cancellation] button, a confirmation message will appear.

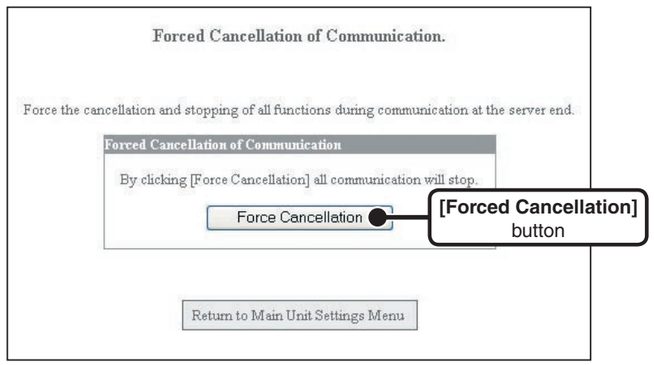
Forced Cancellation of Communication.
Force the cancellation and stopping of all functions during communication at the server end.
Forced Cancellation of Communication
By clicking [Force Cancellation] all communication will stop.
Force Cancellation
Return to Main Unit Settings Menu
[Forced Cancellation] button

2. If it is OK, click the [OK] button to finish the cancellation and end communication.

■ Restarting the System

Click to restart the System.

1. By clicking [Restart], a confirmation message will appear.

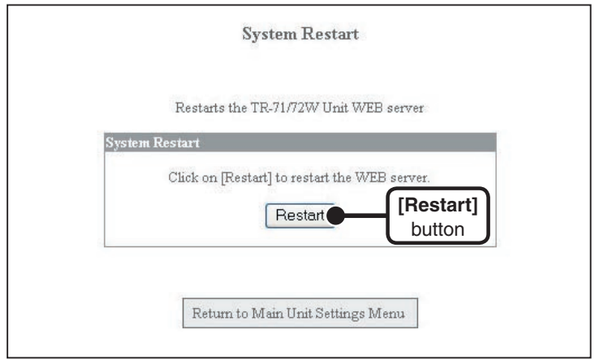

2. Click the [OK] button to begin the restart process.

Checking and Making Changes to Computer Network Settings

In some network environments, it may be necessary to make changes to the IP address and subnet mask at the computer side in order to carry out a search.
See the following procedures for checking and making changes to your computer network settings.

1. In the [Control Panel], open [Network Connections].

2. Select the Network adaptor that you are using, and right click with the mouse and open the Properties.

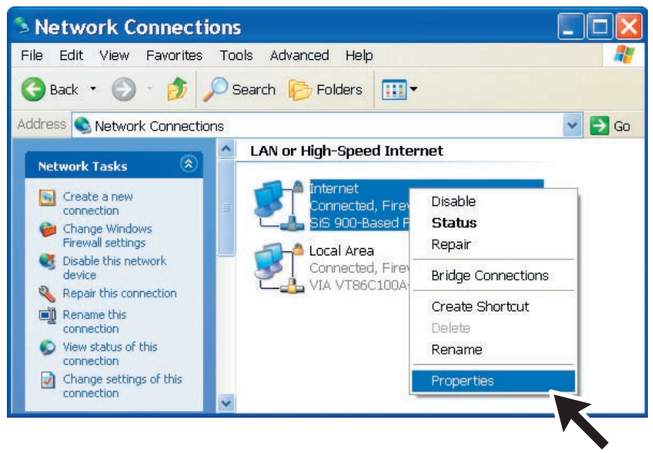

3. Under the "General" Tab, in "This connection uses the following items:" select "Internet Protocol (TCP / IP)" and click on the [Properties] button.

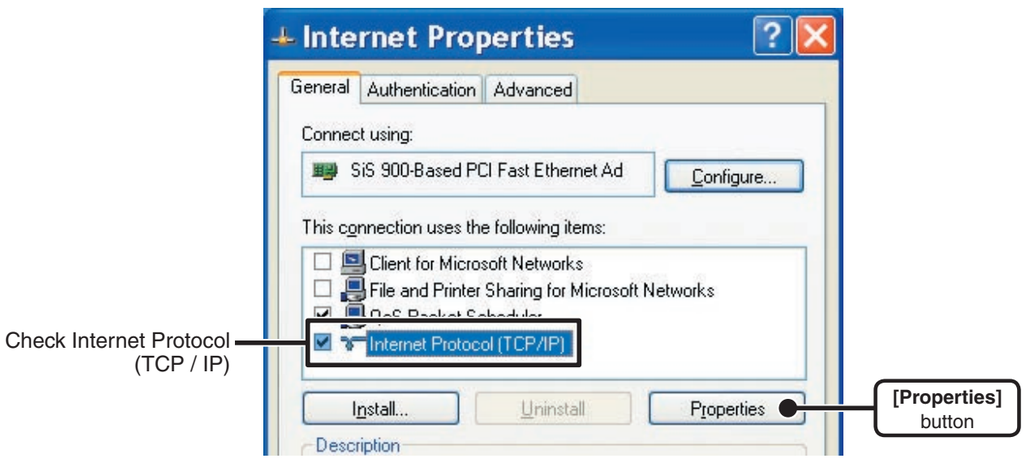

4. In the [Internet Protocol (TCP / IP) Properties] window, under [Use the following IP address:] make sure that the IP address and Subnet mask are correct

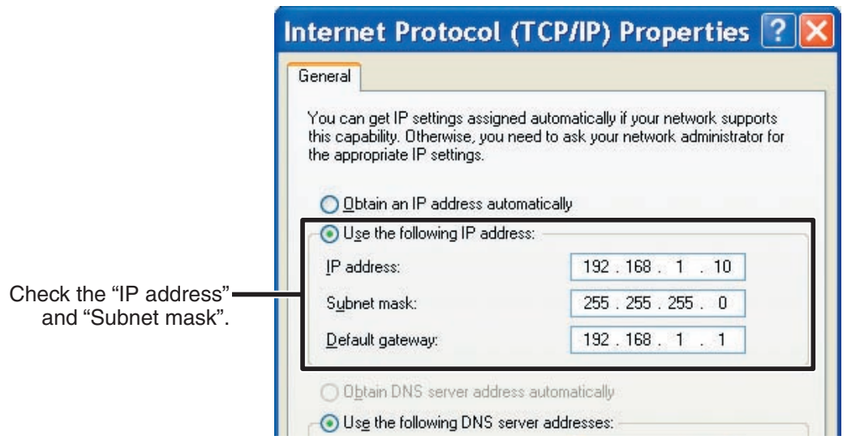
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 10
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 1 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Check the "IP address" and "Subnet mask".

5. Make sure to write down the following so that you can re-enter the settings later: the currently set "IP address", the "Subnet mask", "Default Gateway", "Preferred DNS server", and the "Alternate DNS server".

6. Enter "192.168.1.1" as the IP address and "255.255.255.0" as the Subnet mask.

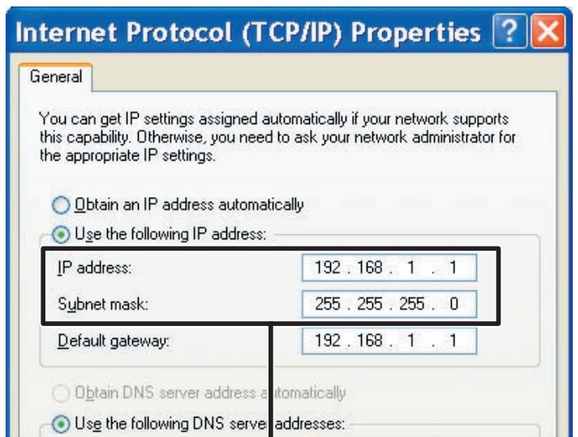
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 1
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 1 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Enter "192.168.1.1 " as the IP address and "255.255.255.0" as the subnet mask.

7. **Click the [OK] button.**

8. **Click the [OK] button in the Network "Properties" Window, as seen in step 3 above, to close the window.**

9. **Once again, in the "TR-7W Settings Utility" run a search and check whether the IP address for the TR-7W connected to the network is displayed.**

10. **If it is displayed properly, make the initial network settings.**

11. **After making the initial network settings, follow steps 1-4 above to open the "Internet Protocol (TCP / IP) Properties" window. Re-enter the "IP address", "Subnet mask", "Default Gateway", "Preferred DNS server", and "Alternate DNS server" that you had written down before and click the [OK] button.**

12. **Open the browser, enter the address (URL) that you set in the settings utility and check to make sure that the display is proper or not.**

※ If you are using a company network or are working in an environment that may have special settings and after having followed the above procedures still cannot view the display properly, please connect your network administrator.

Downloading JRE

To view graphs in your browser, it is necessary to have Java Runtime Environment (JRE) installed on your computer.
If you do not already have it installed on your computer, please download as follows.

NOTE:

- The installation of JRE is completely the responsibility of the user.
- The following information is true as of May, 2005. Changes may occur to the version of JRE and hence exe. file names may also change. Please be sure to download and install the latest version.

1. Please enter http://java.sun.com/ in your browser's address bar; this will take you to Java Technology Homepage.

2. Under 'Popular Downloads, click on [J2SE 1.42 SDK].

3. Scroll down to find [J2SE v 1.4.2_08 JRE] and under that click on [Download J2SE JRE]. This will open the download window.

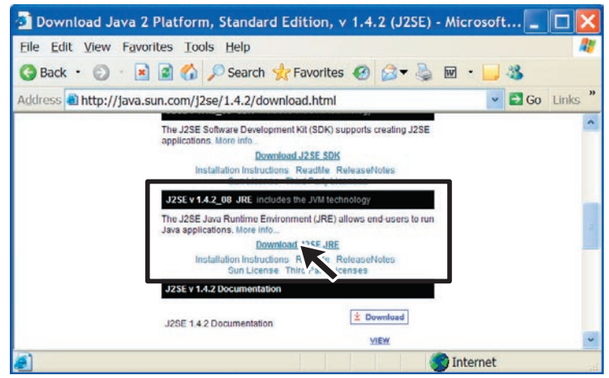
Download Java 2 Platform, Standard Edition, v 1.4.2 (J2SE) - Microsoft...
File Edit View Favorites Tools Help
Back Search Favorites
Address http://java.sun.com/j2se/1.4.2/download.html
Go Links
The J2SE Software Development Kit (SDK) supports creating J2SE applications. More info...
Download J2SE SDK
Installation Instructions ReadMe ReleaseNotes
J2SE v 1.4.2_08 JRE includes the JVM technology
The J2SE Java Runtime Environment (JRE) allows end-users to run Java applications. More info...
Download J2SE JRE
Installation Instructions ReleaseNotes
Sun License
J2SE v 1.4.2 Documentation
J2SE 1.4.2 Documentation
Download
VIEW
Internet

4. The JRE User's Agreement Review page will appear. Click "Review License Agreement" and after having read the agreement, click on "Accept License Agreement" at the botton of the page.

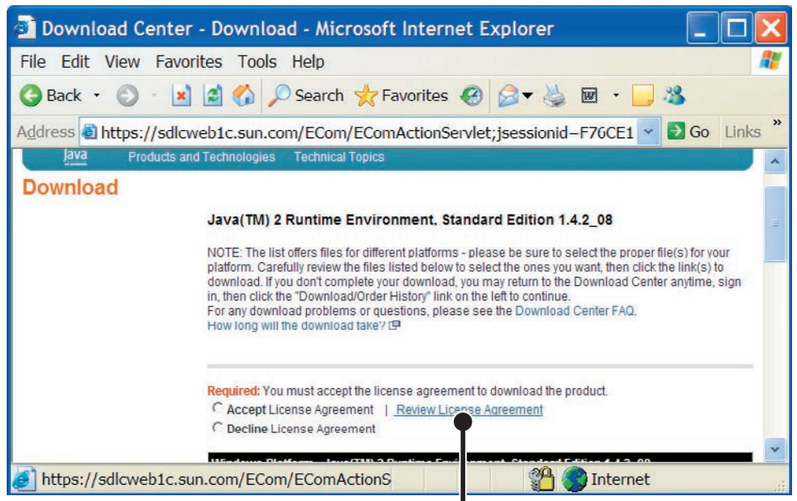
Download Center - Download - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address https://sdlcweb1c.sun.com/ECom/EComActionServlet;jsessionid=F76CE1
Go Links
Java Products and Technologies Technical Topics
Download
Java(TM) 2 Runtime Environment, Standard Edition 1.4.2_08
NOTE: The list offers files for different platforms - please be sure to select the proper file(s) for your platform. Carefully review the files listed below to select the ones you want, then click the link(s) to download. If you don't complete your download, you may return to the Download Center anytime, sign in, then click the "Download/Order History" link on the left to continue.
For any download problems or questions, please see the Download Center FAQ.
How long will the download take?
Required: You must accept the license agreement to download the product.
Accept License Agreement | Review License Agreement
Decline License Agreement
https://sdlcweb1c.sun.com/ECom/EComActionS
Internet

Click Review License Aqreement

5. Under [Windows Platform - Java(TM) 2 Runtime Environment, Standard Edition 1.4.2_08] click [Windows Offline Installation, Multi-language j2re-1_4_2_08-windows-i586-p.exe].

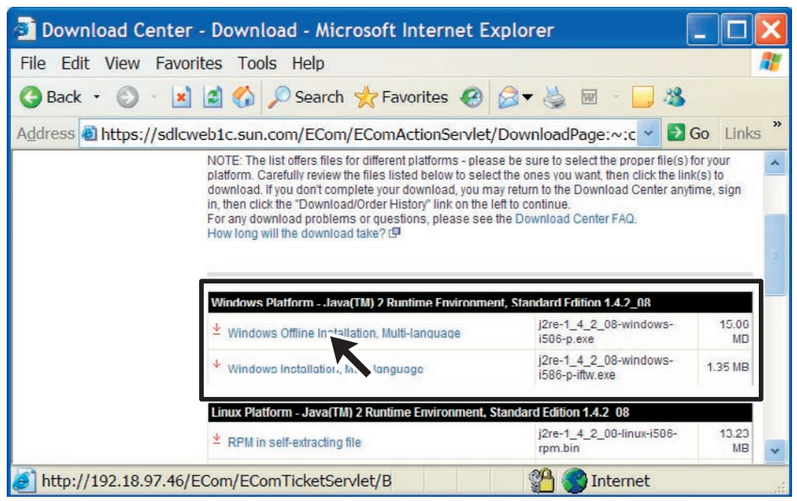
Download Center - Download - Microsoft Internet Explorer
File Edit View Favorites Tools Help
Back Search Favorites
Address https://sdlcweb1c.sun.com/ECom/EComActionServlet/DownloadPage:~:c
Go Links
NOTE: The list offers files for different platforms - please be sure to select the proper file(s) for your platform. Carefully review the files listed below to select the ones you want, then click the link(s) to download. If you don't complete your download, you may return to the Download Center anytime, sign in, then click the "Download/Order History" link on the left to continue.
For any download problems or questions, please see the Download Center FAQ.
How long will the download take?
Windows Platform - Java(TM) 2 Runtime Environment, Standard Edition 1.4.2_08
Windows Offline Installation, Multi-language
j2re-1_4_2_08-windows-i506-p.exe
15.00 MB
Windows Installation, Multi-language
j2re-1_4_2_08-windows-i586-p-iftw.exe
1.35 MB
Linux Platform - Java(TM) 2 Runtime Environment, Standard Edition 1.4.2_08
RPM in self-extracting file
j2re-1_4_2_00-linux-i506-rpm.bin
13.23 MB
http://192.18.97.46/ECom/EComTicketServlet/B
Internet

6. In the File Download dialog, click the [Save] button.

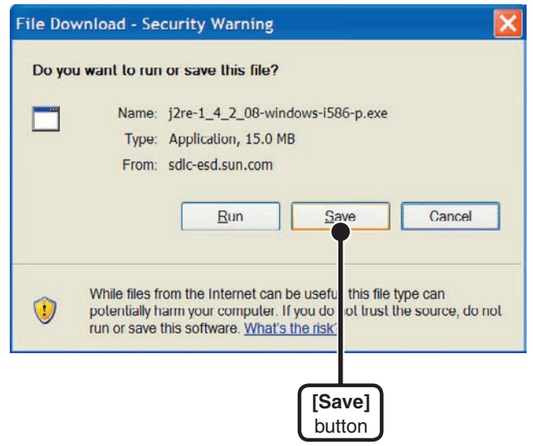
File Download - Security Warning
Do you want to run or save this file?
Name: j2re-1_4_2_08-windows-i586-p.exe
Type: Application, 15.0 MB
From: sdlc-esd.sun.com
Run
Save
Cancel
While files from the Internet can be useful, this file type can potentially harm your computer. If you do not trust the source, do not run or save this software. What's the risk?
[Save] button

7. Specify the Location of the Folder for the download, and click the [Save] button to start the download.

Once the download is finished, double click on the downloaded Install Program [j2re-1_4_2_08-windows-i586-p.exe] and the installation will begin.

Re-installing

Before reinstalling or updating the "TR-7W Settings Utility" software, make sure to carry out the uninstall program first. Before you begin the uninstall program, first make sure to quit all "TR-7W Settings Utility" and Temp / Humidity Graph" programs.

※ To install the "Settings Utility", it may be necessary to have Administrator Rights for the computer into which it will be installed.

1. In the Windows Control Panel, click on "Add/Remove Programs".

2. From the list of currently installed programs, select "TR-7W Settings Utility" and click the [Add / Remove] button.

3. The "Install Shield Wizard" will appear. Check "Remove", and click [Next].

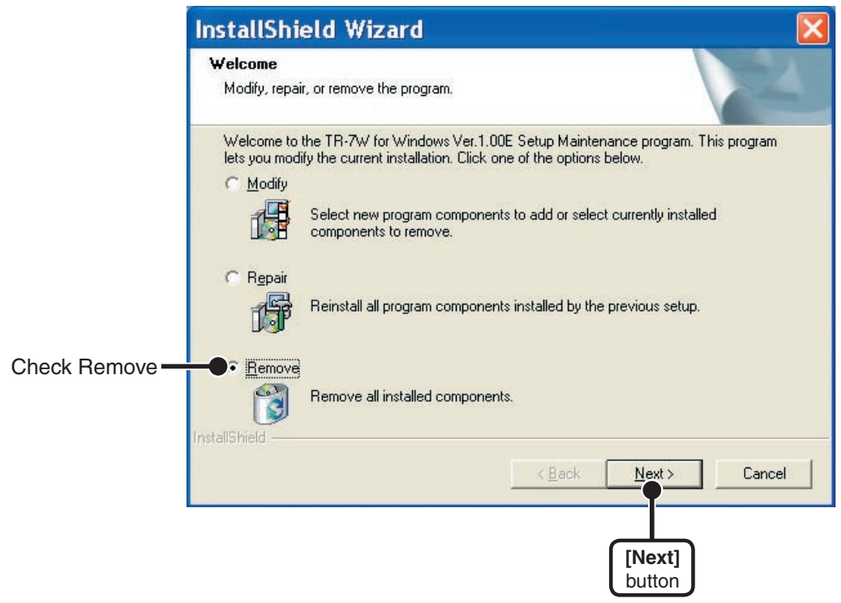
InstallShield Wizard
Welcome
Modify, repair, or remove the program.
Welcome to the TR-7W for Windows Ver.1.00E Setup Maintenance program. This program lets you modify the current installation. Click one of the options below.
Modify
Select new program components to add or select currently installed components to remove.
Repair
Reinstall all program components installed by the previous setup.
Remove
Remove all installed components.
InstallShield
< Back
Next >
Cancel
Check Remove
[Next] button

4. Follow the directions to Uninstall.

5. After the uninstall process is completed, reinstall by following the directions to [Install].

● Even after uninstalling, saved data files will still remain in the folders and locations they were saved in.

Troubleshooting

■ TR-7W Settings Utility

Q.1 A "Windows Security Alert" message keeps popping up, what should I do ?

A If you are using Windows XP SP2, the following message may be displayed.

Windows Security Alert
To help protect your computer, Windows Firewall has blocked some features of this program.
Do you want to keep blocking this program?
Name: TR7W Settings Utility
Publisher: T&D Corporation
Keep Blocking
Unblock
Ask Me Later
Windows Firewall has blocked this program from accepting connections from the Internet or a network. If you recognize the program or trust the publisher, you can unblock it. When should I unblock a program?

There is no problem, so please click [Unblock].

Q.2 Is it possible to use the "TR-7W Settings Utility" via a proxy server ?

A Communication is impossible via a proxy server. Communication is possible via the Web Viewer

Q.3 I cannot run a search in the Network Initialization, Why ?

A One of the following may be the reason.

- Power is not being supplied by the AC adaptor to the TR-7W.
- The TR-7W and the computer you are using are not on the same network.
- The [TR-7W Settings Utility] is already being used by another computer.
- The LAN card which is being used has not been formatted.

Q.4 I cannot make settings in the Network Initialization, Why ?

A One of the following may be the reason.

- The Login ID and / or Password are incorrect.
- Another TR-7W with the same IP address is on the same network.

Q.5 Why does a "Communication Error (Connection Error) " appear ?

A The network is probably not properly connected.

- One of the following is incorrect: IP address or Domain, Login ID, Password, or Port Number.
- The network is not properly connected (the LAN cable is broken, the Hub is damaged, a mistake occurred in setting up the router, etc…)
- In the "Menu" – " Communication Time Settings" try slowing the communication time.

Q.6 What are other causes of "Communication Error" messages ?

A One of the following may be the reason.

- If the IP Block setting is ON and communication can occur with only specific PC's.
- If after several attempts a communication error continues to occur, turn OFF the TR-7W and restart.
- A warning report mail or test mail is in process. If a sending error occurs, processing takes time, so please wait for at least one minute before trying again.

Q.7 Which has priority, a wireless LAN or a wired LAN ?

A If a wireless LAN card is inserted, the wireless LAN will have priority. Because of this, if the wireless LAN settings are incorrect and a wired LAN is connected, communication will not take place via the wired LAN and hence communication will not occur.

Q.8 Even after carrying out adjustment settings, the temperature display has not changed, why ?

A Has recording been stopped ?
Adjustment settings will not take effect during recording.

Q.9 I forgot the password, what should I do ?

A First, return the settings to the factory default settings and then redo the settings.

Q.10 Is it possible to hide the IP address history and settings history ?

A If you wish to disable the History, in the "Menu", select [Login History] and click to "OFF". Please note that a history will remain viewable from when before it was disabled. To erase a history, please click on "Clear Login History" in the Menu.

■ Web Viewer

Q.1 What does the message "Another communication is in progress" mean ?

A If another computer is downloading data, the breaking of communication will be forbidden and the message, "Another communication is in progress" will appear. If this message continually appears, in the Web Viewer under "Administrator Tools"–"Main Unit Settings", click on "Forced Cancellation of Communication" and then try communicating again.

Q.2 While downloading recorded data the following message appeared "Getting Ready for Download"→"Response Code Error". What happened ?

A The following may have occurred.

- Someone else was downloading data.
- During the downloading, some forbidden action was taken, such as clicking the [Return] button or closing the browser.
- In this condition, if you continue with downloading the message "Another communication is in progress" will appear.
- If at that point, you went to "Administrator Tools"–"Main Unit Settings", and clicked on "Forced Cancellation of Communication".
- Then while downloading recorded data "Getting ready for Download"→"Response Code Error" appears.

If that occurs, wait for one minute or so and try to download data again and communication should work normally.

Q.3 Can the Warning Mail Transmission Test fail ?

A The only way to know whether a warning mail transmission test has succeeded or not is by checking to see is the mail was received or not. If the transmission failed, one of the following may be the reason.

- In the Detailed Network Settings, the necessary gateway address settings have not been made.
- In the Detailed Network Settings, the necessary DNS settings have not been made.
- In the Detailed Network Settings, the necessary SMTP Server settings have not been made.
- Check the ESS-ID for mistakes in upper and lower case letters.
- The SMTP server needs SMTP authentication or POP before SMTP. (May need to change Provider)
- The SMTP server will not recognize the Sender Address (May need to change Provider)

Q.4 The Web Viewer graph suddenly disappeared, what happened ?

A In the following cases, the graph data in the Web Viewer will be reset.

- If the communication function is restarted from the TR-7W Setting Utility.
- If you have restarted the system in the Web Viewer under "Administrator Tools"–"Main Unit Settings"–"Restarting the System".
- If the AC adaptor plug is removed.

Q.5 When using the port forwarding function and accessing a multiple number of TR-7W units, it seems that I can log into the Web Viewer Administrator Tools without entering a Login ID or a Password, why ?

A With the TR-7W units, once you have logged into the Web Viewer Administrator Tools it is possible from the same browser to access the administrator tools again without re-entering a Login ID or a Password. If, from the same browser, you access a TR-7W unit with a different IP address, you will need to enter the login ID and Password to log into the Web Viewer Administrator Tools. This is because a check of the login info occurs with each new IP address.
When using the port forwarding function and accessing a multiple number of TR-7W units, the IP address remains the same and the port number is different. Due to this, even though administratively each TR-7W has a different IP address, they all become the same IP address.That is why, once you have logged into 1 TR-7W unit, it is possible to log into another TR-7W without entering a Login ID or a Password.

Q.6 I cannot connect to a wireless LAN. Is there a way to check the wireless LAN status ?

A Unfortunately, there is no way to check. But you can check the following.

- Is the ESS-I or WEP key code incorrect ?
- Are you using a Wireless LAN card other than the ones we endorse.

Q.7 I tried using a different wireless LAN card and now I can't get communication to work, what happened ?

A If after having successfully communicated with one LAN card, you insert a different LAN card and restart the TR-7W, even with the same settings, communication will not occur. That is because the MAC address of the previously used LAN card is still in the APR table in your computer. In order to communicate using the new LAN card, you can either erase the APR table or reboot your computer.

Q.8 If I restart the system, what happens to the already recorded data ?

A Even if you restart the system, the recorded data will be saved and will not be erased or lost. Recording will also continue unaffected by a restarting. However, graph data will be erased.

Q.9 I forgot the password, what should I do ?

A First, return the settings to the factory default settings and then redo the settings.

FAQ's

■ Q&A about TR-71W / 72W

Q.1 The TR-7W loggers use an AC adaptor, what happens when there is power shortage ?

A During a power shortage the Web Server will not function and communication via LAN cannot occur, but with the backup battery, data measurement and recording will continue.

The backup battery life is about 3 months. If the battery loses all of its power, the recorded data will also be lost, so please be careful.

※For info about what a web server is, see [Q&A about Web Server Functions].

Q.2 Can I connect directly to my computer with the LAN cable that comes with the logger ?

A To connect a TR-7W logger directly to your computer, you must use a cross LAN cable.
The LAN cable supplied is a straight LAN cable and cannot be used to connect directly to your computer.

Please purchase a cross LAN cable at your local computer supply store.

Q.3 Does the TR-7W have a clock and calendar ?

A The TR-7W has an internal clock (calendar) built into it.

If the internal clock's date and time are set incorrectly, the programmed recording start time, the download data time, and the monitor current readings time will all be wrong. Make sure to set correctly before using.

NOTE:
If you make clock settings manually, the clock will lose its settings upon removal of the AC adaptor or after restarting the system.

Q.4 If two TR-7W are connected to the same router, how can I identify which is which ?

A If two or more TR-7W loggers are connected to the same router, it is possible to identify by setting each with am individual IP address and from the Internet side can be identified by the port number to which it is connected.

See Q.7 in "Q&A about the Internet" for more details.

Q.5 Where can I set the port number ?

A The port number can be set in the TR-7W " TR-7W Settings Utility".
Under normal conditions, for HTTP communication the setting is 80, but if you wish to synchronize the settings to match the router settings, it is necessary to change the settings for the TR-7W and for the router.

Q.6 It is possible to connect the TR-7W to the network by using the LAN cable that connects the computer to the LAN network ?

A Inserting the LAN cable that connects the computer to the network into the TR-7W will physically connect the TR-7W to the network, but without making the necessary settings such as IP address, the TR-7W cannot be active in the network and hence is not really connected.

After having inserted the LAN cable into the TR-7W, make sure to go to "TR-7W Settings Utility" to make the necessary IP address and Subnet mask settings.

Q.7 It is possible to connect the TR-7W to the wireless LAN by removing the wireless LAN card from my computer and inserting it into the TR-7W ?

A Inserting the wireless LAN card that connects the computer to the network into the TR-7W will physically connect the TR-7W to the network, but without making the necessary settings such as IP address, the TR-7W cannot be active in the network and hence is not really connected.

After having inserted the wireless LAN card into the TR-7W, make sure to go to "TR-7W Settings Utility" to make the necessary IP address and Subnet mask settings.

Q.8 I want to use a wireless LAN, which products should I use ?

A For a list of LAN cards that have been proven compatible, please see our Homepage for updates.

Q.9 Which has priority, a wireless LAN or a wired LAN ?

A If the wireless LAN is connected properly and all settings are correct, the wireless LAN will have priority.

Q.10 I want to have a mail sent when a warning occurs, how can I do this ?

A To use the warning mail function, it is necessary to have an SMTP server.
If you have an Internet connection, use the mail server (※1) of your Internet service provider or some other means to access a mail sever. If you have a mail server on your company LAN, there may be specific instructions and settings for sending mail. Please ask the network administrator at your company for details.

※1 Communication cannot occur with an SMTP server that uses SMTP authentication or POP before SMTP.

■ Q&A about Web Server Functions

Q.1 Are the TR-7W data loggers web servers ?

A The TR-7W loggers have web server functionality built into them. This function allows for the provision or the serving up of temperature and humidity data, current readings and graphs.

Q.2 What is a Web Server ? What is a client ?

A In a computer network, the computer that acts as a provider of services to various users is called a server and the computers which request these services from the server are referred to as clients.
Most communication service is made up of exchanges between servers and clients.
In the case of TR-7W, the TR-7W provides functions and information so it is a server and the computer, which reads this information or functions, is the client.
For example, the storage of homepages and the making public of these are done by the "Web Server" and the sending and receiving of e-mail is preformed by the "Mail Server".

■ Q&A about Viewing the Web Site

Q.1 Can I use a TR-7W logger without connecting it to a network ?

A If the TR-7W is not connected to a network, the downloading of recorded data, the display of current readings, recording settings and all other types of settings cannot be carried out.

Q.2 Is it possible to view the current readings of other loggers ?

A Yes it is possible.

By creating one registrant or master logger in the [TR-7W Settings Utility], and then registering a multiple number of loggers as remote or slave units of that registrant, it is possible to simultaneously view a number of current readings from multiple loggers in the same browser.
It is possible to register up to 10 remote units to 1 master registrant logger.

Q.3 What must I do to view current TR-7W readings on my cell phone ?

A To view the current readings of a TR-7W logger it is necessary to connect your cell phone to the Internet.

If the TR-7W logger is connected to the Internet it is possible to view the current readings via your cell phone by entering the same URL as you do when viewing via your computer.

■ Q&A about Networks

Q.1 What is a network ?

A A network is a system in which a group of computers are connected by cable (copper wire, optical fiber, etc), infrared ray, radio waves or other means in order to share and exchange information.

There are basically two types of computer networks.
A Local Area Network or LAN consists of a group or network of computers in a limited range.

A Wide Area Network or WAN is a network of computers that are connected over long distance. The Internet is an example of a WAN that has connected a multiple number of networks.

Q.2 What is an IP address ?

A In a network, in order to distinguish your computer from another it is necessary to assign a number; this number is called an IP address.

When you connect to an outside network such as the Internet the IP address that is used is referred to as a "Global IP address. In a Local Area Network the IP address that is used is called a “Private IP address".

An IP address is divided into 4 blocks of numbers separated by periods, such as "192.168.15.10". The assigned numbers can use the digits 0-255 with private IP addresses usually beginning with numbers such as "192.168.".
※ However, the number "255." is not usually used.

This number is absolutely necessary to enable participation in a network, so it is necessary to set the IP address to a number that suits your network environment.

Q.3 What is a Subnet mask ?

A An IP address is made up of the network address to which the computer belongs (network address) and the computer’s own address within the network (host address). The Subnet mask determines the division between these.

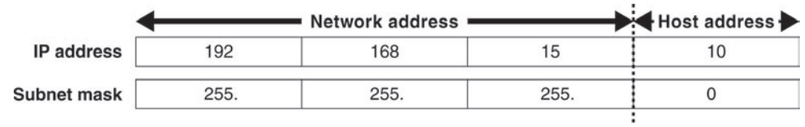

The Subnet mask, similar to the IP address, is made up of four blocks of numbers divided by periods, such as “255.255.255.0”.

This number is absolutely necessary to enable participation in a network, so it is necessary to set the Subnet mask to a number that suits your network environment.

Q.4 How should I make settings for the IP address / Subnet mask ?

A The IP address and Subnet mask settings vary depending upon your networking environment (structure). Please consult your network administrator for details. Below is a simplified explanation of a company LAN set up for your reference.

If the computer connected to your company LAN has a Subnet mask of "255.255.255.0" and an IP address of "192.168.100.1", set the Subnet mask to the same as your computer, "255.255.255.0".
Set the IP address to 192.168.100.***. Make sure to set the last three digits,***, to a number between 1-254 that is not the same as any other computer connected in your network.

IP address	192	168	100	1
				⋮
	192	168	100	254

Q.5 What is a MAC address ?

A A MAC address is a unique number made up of alphabet and numbers that is assigned separately to the components of network communication (computer, server, router, etc…). Each MAC address is assigned to the hardware and is unique to that device, so there is no chance for duplication.

If you compared it to a cell phone, even though the phone number may be changed, you could think of the MAC address as the serial number of the phone, which cannot be changed and is unique to each unit.

The MAC address is written on a sticker on the back of each TR-7W logger.

Q.6 What is a port number ?

A When using TCP/IP communication with a LAN cable or via a phone line, port numbers are assigned to distinguish one application from another.

Port numbers can be assigned from 0 to 65535. The numbers 0 to 1023 are already reserved to communication services and are referred to as "Well Known Port Numbers".

[Well known port numbers] are: HTTP communication at 80 / FTP communication at 20 and 21 / SMTP communication (sending mail) at 25 / POP3 communication (receiving mail) at 110.

In order for communication to work properly these port numbers must be set correctly.

Q.7 What is a gateway ?

A A gateway is a term used to refer to a device or software that is used to link networks with different standards.

For example, a gateway is needed when connecting a cell phone to the Internet or in any case where you wish to connect two devices that are completely different. Gateway carries with it the meaning of entrance and exit and a router may also be referred to with this term.

When making gateway settings, it is necessary to make IP address settings for the device that will act as a gateway.

Q.8 What is a URL ?

A A URL is an address that is written in a way so that it is easy for the DNS function to determine on which server the IP address is located.

This address begins with "http:// " and is followed by such things as domain names, server names, port numbers, file names and other such info.

For example, if the IP address that is assigned to "www.tandd.co.jp" is "61.197.203.107", by entering "http://61.197.203.107/product/wdr_3/tr_7w_01feature.html" in the browser, the same page will appear as when you enter "http://www.tandd.co.jp/product/tr_7w/tr_7w_01feature.html".

※ The DNS or Domain Name Server helps to switch difficult to understand IP address of just numbers, such as "61.197.203.107" into easy to grasp names such as "www.tandd.co.jp" and helps connect to the desired server.

■ Q&A about the Internet

Q.1 What is a fixed IP address ?

A Usually, when you connect to the Internet, the provider with which you have contracted service automatically assigns an IP address which may be different each time you connect, or may change after a certain length of time.

With this type of changing IP address, it is more difficult for outsiders to illegally enter your computer. On the other hand, when using your computer or a TR-7W unit as a sever, it would be necessary to enter a different IP address as the URL each time you wish to access it. In such a case, it would be necessary to find out the current IP address each time you wished to access and this would be totally inconvenient.

To help solve this problem, there is something called a fixed IP address service that your provider can offer.

With a fixed IP address, you will be assigned a special unique IP address.

Some providers may give you a fixed IP address from the beginning of service, but with most providers it is necessary to sign up for this special service.

Q.2 How do you get a fixed IP address ?

A A fixed IP address is a service offered by your Internet provider.
For details about how to receive a fixed IP address contact the Internet provider with which you are connected.

Q.3 How should I set up a fixed IP address ?

A If you wish to open the TR-7W via the Internet, you must set the fixed IP address to the router and not to the TR-7W. Because it is impossible, when using normal ADSL or FTTH lines, to directly connect the TR-7W to the Internet line, it is necessary to place a router between the logger and the ADSL (FTTH) modem.

When using a router, the fixed Internet IP address should be assigned to the router and all access to the TR-7W from outside should go through the router. In this case, the router will have two IP addresses: an external IP address for the Internet and an internal IP address for the company or household LAN.

Q.4 I want to use a URL without a fixed IP address, how can I do that ?

A If you wish to access a TR-7W by URL but without a fixed IP address, it is possible to use a dynamic IP address.

The DNS or Domain Name Server helps to switch difficult to understand IP address of just numbers, such as "61.197.203.107" into easy to grasp names such as "www.tandd.co.jp"and helps connect to the desired server.

The DNS usually changes names to fixed IP addresses.

But, if for some reason you cannot use a fixed IP address or for security reasons you wish not to use a fixed IP address, there is a type of DNS called a dynamic DNS, which can handle ever-changing IP addresses.

For example, the starting IP address is "210.0.0.1" and the URL associated with it is "http://www.tr7w.com".

The IP address "210.0.0.1" is of the changing type that is periodically reassigned by the provider. After a certain period of time the assigned IP address is changed to "210.0.0.2".

Normally, at this point the DNS would not associate the URL with the IP address and access would be made impossible, but because the dynamic DNS tracks the IP address you can still access the desired server using the same URL.

There are many types of dynamic DNS plans and services available, please contact your local provider for more details.

Q.5 Can I use the Warning Mail function without getting or using a fixed IP address ?

A If it is possible for you to connect to the Internet by using a dynamic DNS, theoretically it is possible to send mail without having or using a fixed IP address. That is presuming it is possible to successfully send data via your provider's mail sever or your company's mail server.

Fundamentally, if you are able to access your company mail server or connect to the Internet it should be possible to send mail.

It should, however, be noted that communication cannot occur with an SMTP server that needs SMTP authentication or POP before SMTP.

Q.6 Is it possible to connect to the Internet without a fixed IP address or an URL ?

A Yes it is possible to connect without using a URL or having a fixed IP address, but because the IP address that will be assigned by the provider will be constantly changing, the access will be varied and will not go smoothly.

For example, the IP address that you used successfully one hour before may no longer work and access will be made impossible. Further, you will have no way of verifying the new IP address.

We strongly suggest using either a fixed IP address or a dynamic DNS.

Q.7 If I wish to view the current readings of a multiple number of TR-7W units via 1 specific unit, do I need to have affixed IP address for each unit ? How about when there are multiple units being used with 1 router ?

A If the units are all interspersed on the same independent network, you will need to have a fixed IP address for each unit.

If you are using a router and wish to open a multiple number of TR-7W units in the same network via the Internet, it is possible to assign a fixed IP address to the router and then give each of the TR-7W units in the network a different port number.

For example, to access the TR-7W which has a URL of "http://www.tr7w.com" and an HTTP port number of "9680" you would enter the HTTP port number at the end of the URL as such: "http://www.tr7w.com:9680".

For more information about these settings see the user's manual that came with your router.

Q.8 If I connect the TR-7W to the Internet, is it not possible that another person could read my data or change my settings ?

A Yes, as long as you are connected to the Internet, the logger could well be the target of unwanted access.

And, as long as you are open on the Internet, it is possible that a third party could view your current readings or recorded data, or even, make changes to your settings.

But as long as your password and ID have not been leaked or stolen, it will be impossible to access the most important areas.

But be aware that there are no assurances that your password and ID will not be stolen. If you wish to lessen these risks we strongly suggest that you install a firewall and other security software into your network.

Q.9 What is POP before SMTP ?

A POP before SMTP is one method used for the sending and receiving of mail.

A mail server uses two types of protocol to send and receive mail. Generally when mail is sent it uses an SMTP server and when receiving mail uses a POP server.

Normally, the sending and receiving of mail are done separately. However, recently in an effort to fight spam mail a new type of mail server, referred to as POP before SMTP, has appeared.

The way it works is that after logging in your Login ID and password to the POP server you can access the SMTP server for a certain length of time in order to send mail.

Due to the particularity of this method, the TR-7W mailing function has not been designed to be compatible with POP before SMTP.

Q.10 How can I clear POP before SMTP ?

A POP before SMTP is controlled by the administrator of your company LAN or by your provider and unfortunately there is nothing that you can do to cancel it.

If you wish to use the warning mail function, please make sure to use a mail server that complies with normal SMTP / POP specifications.

Specifications

■ TR-71W / TR-72W

Unit	TR-71W	TR-72W	
Measurement Channel	2 Channel	2 Channel	
Measurement Item	Temperature only	Temperature	Humidity
External Sensor	−40 to 110℃	0 to 50℃	10 to 95%RH
Optional Sensor	−60 to 155℃ ※ 1	−40 to 110℃	
Measurement Accuracy	Average ±0.3℃ (−20 to 80℃) Average ±0.5℃ (−40 to -20℃ / 80 to 110℃) ※ 2		±5%RH (At 25℃ 50%RH)
Measurement Resolution	0.1℃		1%RH
Attached Sensors	TR-0106 : TPE Resin-Shielded sensors x 2		TR-3110 Temp / Humidity Sensor x 1
Recording Interval	1.2.5.10.15.20.30 Seconds 1.2.5.10.15.20.30.60 Minutes / Total of 15 choices		
Recording Capacity	8,000 Readings x 2 Channels		
Recording Method	Endless (Overwrite from the oldest data when recording capacity is full) One-time Method (Stop recording when recording capacity is full)		
LCD Display	Measurements (Ch1 only, Ch2 only, alternating display) , Recording Status, Battery Life Warning , Over-Measurement Range , Amount of Recorded Data , Unit of Measurement		
Power Source	Special AC Adaptor (DC5V)		
Data Back−up ※ 3	Saved for about 3 months with 1 lithium battery (CR-2032) ※ 5		
Interface	Wired LAN : 10 / 100 Base − TX RJ45 connector Wireless LAN : IEEE802.11b CF type Wireless LAN Card ※ 6		
Dimensions ※ 4	H55mm x W78mm x D39mm		
Weight	About 101g (Including one battery)		
Working Environment for Main Unit	Temperature : 0 to 60℃ Humidity : 20 to 80%RH (without condensation) ※ 7		
Accessories Included in Package	AC Adaptor (AD-0605) , Lithium Battery , LAN cable (2m) , Software CD , User's Manual , Warranty		
Browser Functions	View Temperature and Humidity Data in Graph Form , Start Recording, Download Data , Monitor Current Readings , Check Back-up Battery		
Warning Mail Function	E-mail:Register up to 5 addresses to receive mail		
Power Consumption	About 290mA (when using wired LAN)		
Security	Access Controlled IP Address , ID Password Authentication		
Compatible OS	Windows 2000 / XP		

※ 1 Compatible with all T&D tested and approved models.
※ 2 Errors in accuracy increase with increase in electrical noise.
※ 3 Battery Life varies according to type of battery, measuring environment, communication frequency, and ambient temperature. This estimate of battery life was based on normal use under normal conditions using a new battery. This is in no way a guarantee of battery life.
※ 4 Without protrusion.
※ 5 The backup battery is for data backup and emergency use only. The battery is not used under normal conditions. If using only the battery, network communication cannot occur.
※6 Please do not use any CF type Wireless LAN cards that have not been proven to be compatible. Please ask your local representative about which Wireless LAN cards can be used. For an updated list of Wireless LAN cards that have been tested and proven compatible please see our Homepage.
※ 7 This is the working environment specs when using only the data logger. When using with a LAN card or cell phone these specs may vary.

■ TR-7W Utility

Compatible Devices	TR-71W / TR-72W
Communication Functions	Network Initialization Settings, Detailed Network Settings, Warning Report Settings, Measurement Reading Adjustment and Gather Current Reading Settings

■ TR-7W Series Web Viewer

Compatible Devices	TR-71W / TR-72W
Communication Functions	Recording Start (Immediate/Programmed), Recording Stop, Downloading of Recorded Data, Monitor Current Readings, Monitor Current Readings from Multiple Units, Graph, WEB Viewer Settings, Main Unit Settings (Clock Settings, Buttons Settings, LCD Settings, Channel Name Settings, Send Warning Mail Test, Forced Cancellation of Communication, Re-start System), Properties

■ Temperature / Humidity Graph

Compatible Devices	TR-71W / TR-72W
Number of Channels	8 Channel Simulaneous Display and Processing , Possible to process mixed data from up to 4 units.
Temp / Humidity Graph	
Graph Display	Temperature and Humidity Graphs for each Channnel / Zoom in, out and scroll with mouse or keyboard / Change Channel Colors / Turn ON and OFF Channel Display
Data Display	Channel Name / Recording Interval / Number of Readings / Highest Lowest and Average Readings / Unit of Measurement / AB Cursor Dates, Times and Data Readings / Calculated Difference between Cursor A and B
File Output	T&D Common Data File / Text File (CSV,etc) (Selected Range or File for Entire Period)
Printing	Graphs / Tables
Others	Data List Display / Calculation Range Settings / Data Maintenance / Edit Recording Conditions Delete Data by Channel / Re-order Data by Channel

■ PC Operating Environment

OS	Microsoft® Windows® 2000/XP (English) ※ 1
PC / CPU	A Stable Windows Operating Environment LAN, TCP/IP Communication Possible
Memory Capacity	Enough memory to stably operate Windows
Disc Space	More than 10MB free space (More free space is necessary for data)
Monitor	VGA (SVGA higher than 800×600 recommended), more than 256 colors
LAN	100BASE-TX or 10BASE-T Twisted pair cable confirming to Category 5 (STP/UTP)
Web	Internet Explorer 6.0 or higher

※ 1：To install the [Settings Utility], it may be necessary to have Administrator Rights for the computer into which it will be installed.

Options

■ Temperature Sensors (For TR-71W)

unit : millimeters

TR-0106 TPE-resin-shielded Sensor

Cable Length 0.6 m
Thermal-Constant Time In the air : Approx. 75 Sec.



TR-0206 Stainless Protection Sensor

Cable Length 0.6 m
Thermal-Constant Time In the air : Approx. 75 Sec.



TR-0306 Stainless Protection Sensor

Cable Length 0.6 m
Thermal-Constant Time In agitated water : Approx. 18 Sec.



TR-0406 Stainless Protection Sensor

Cable Length 0.6 m
Thermal-Constant Time In agitated water : Approx. 20 Sec.

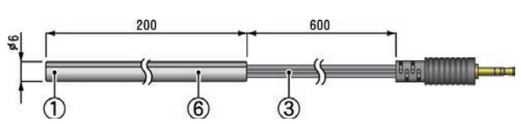

TR-0506 Stainless Protection Sensor

Cable Length 0.6 m
Thermal-Constant Time In agitated water : Approx. 20 Sec.



TR-0706 Stainless Protection Sensor

Cable Length 0.6 m
Thermal-Constant Time In agitated water : Approx. 18 Sec.



Materials : ① Thermistor ② TPE resin-shielded sensor ③ TPE resin-shielded wire ④ M3Screw Hole
⑤ Compaction Tube ⑥ Stainless Pipe (SUS304) ⑦ Stainless Pipe (SUS316)

Possible Measurement Range : −40 to 110℃
Sensor Temperature Durability : −50 to 115℃
Meaurement Accuracy : Average ± 0.3℃ (−20 to 80℃) Average ± 0.5℃ (−40 to −20℃ / 80 to 110℃)

unit : millimeters

TR-1106 Teflon-shielded Sensor

Cable Length 0.6 m
Thermal-Constant Time In the air : Approx. 15 Sec.
In agitated water : Approx. 2 Sec.



TR-1220 Stainless Protection Sensor

Cable Length 2 m
Thermal-Constant Time In the air : Approx. 36 Sec.
In agitated water : Approx. 7 Sec.



TR-1320 Stainless Protection Sensor

Cable Length 2 m
Thermal-Constant Time In the air : Approx. 12 Sec.
In agitated water : Approx. 2 Sec.



Materials : ① Thermistor ② Stainless Pipe (SUS316) ③ Teflon Compaction Tube
④ Teflon Resin (FEP)-Shielded

Possible Measurement Range : −60 to 155℃
Sensor Temperature Durability : −70 to 180℃
Meaurement Accuracy : Average ± 0.5℃ (−40 to 80℃) Average ± 1.0℃ (−60 to −40℃ / 80 to 100℃)
Average ± 2.0℃ (100 to 155℃)

■ Sensor Extension Cable (Temp Sensor Only)

unit : millimeters

TR-1C30 Sensor Extension Cable

Cable Length 3.0 m
Materials ① Vinyl Coated Electrical Wire



NOTE:
Can not be used with Temperature / Humidity Sensors.
Only one extension cable can be used with each sensor.
When using an extension cable there will be a gap of +0.3℃ at normal temperature and at -50℃, a gap of +0.5℃ may occur.

■ Humidity and Temperature Sensors (For TR-72W)

unit : millimeters

TR-3110 Humidity and Temperature Sensors

Cable Length 1 m

Sensor Response Time Approx. 7 min. (90% response)



Materials : ① Temperature/Humidity sensor ② Polypropylene resin ③ Vinyl Coated Electrical

Possible Temperature
Measurement Range : 0 to 50℃

Possible Humidity
Measurement Range : 10 to 95%RH

Sensor Temperature
Durability : −10 to 55℃

Humidity
Measurement Accuracy : ± 5%RH (at 25℃ 50%RH)

Service life : 1 yeay (under normal operational conditions)

Operational conditions : Without dew condensation, water leakage or effect from corrosive gas or organic solvents.

■ AC Adaptor

unit : millimeters

AD-0605 AC Adaptor

Input 100 to 120 V
Output 5V2A
Cable Length 1.85 m

AD-0606 AC Adaptor

Input 100 to 240 V
Output 5V2A
Cable Length 1.85 m

■For product information or questions contact us at:

T&D CORPORATION

5652-169 Sasaga Matsumoto, Nagano Japan 399-0033

Tel: +81-263-27-2131 Fax: +81-263-26-4281 E-mail: overseas@tandd.co.jp

Office Hours : Monday to Friday 9:00−12:00 / 13:00−17:00

(GMT +9:00 Tokyo Time)

[Home Page / T&D Online]

We have opened an English Homepage called "T&D Online" for your convenience. Here you can find information about our company, news, product, news, products, upcoming events, software and user's manulas downloads, as well as, other support. Please stop by and see what we have to offer.

http://english.tandd.com/

Thermo Recorder TR-71W / TR-72W User's Manual

Published by T&D CORPORATION

© Copyright 2005 T&D Corporation. All rights reserved.